


US-LT40A(B)L SERIES SCREW DRIVERS

EXPLODED VIEW

Remove #38 before setting up optional parts #88, #89, #90, #91, and #92.

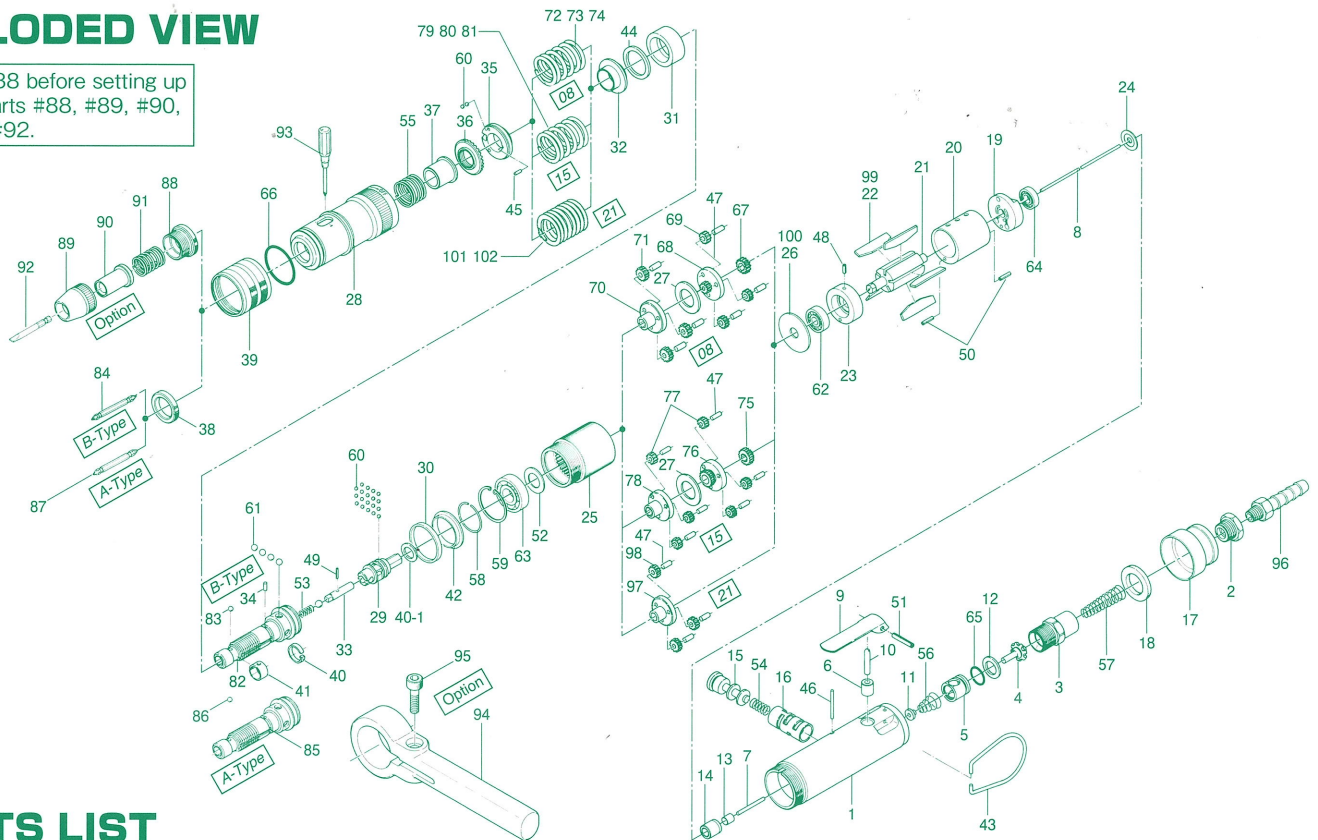

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	461-025-6	Casing	1	#40-1	461-344-6	Cam Retainer	1	#76	472-480-5	First Gear Cage	1
# 2	480-091-8	Air Inlet Bushing	1	#41	471-356-7	Bit Band	1	#77	472-470-5	First Planet Gear	1
# 3	461-097-6	Air Inlet Connector	1	#42	463-334-7	Anvil Spacer	1	#78	472-485-5	Second Gear Cage	1
# 4	259-100-0	Valve	1	#43	010-790-1	Suspension Ring	1	#79	976-516-0	Spring (22.1×28) (2.3) Standard	1
# 5	461-102-6	Valve Bushing	1	#44	944-019-0	Back-up Ring (P-19)	1	#80	976-515-0	Spring (22.7×28) (2.6) Strong	1
# 6	553-103-1	Valve Rod Bushing	1	#45	970-092-0	Pin (2×5.5)	1	#81	976-517-0	Spring (21.5×31) (2.0) Weak	1
# 7	970-108-0	Pin (H)(2×26.8A)	1	#46	970-105-0	Pin (2×24)	1	Parts for US-LT40L-21			
# 8	463-104-7	Valve Rod	1	#47	972-089-0	Roller Pin (3×8)	6	#97	472-480-3	Gear Cage	1
# 9	466-107-5	Valve Lever	1	#48	973-006-0	Roll Pin (2×6)	1	#98	472-470-3	Planet Gear	3
#10	461-114-6	Valve Pin	1	#49	969-470-0	Pin (E)(2×8)	1	#99	472-287-3	Rotor	1
#11	259-254-0	Shut-Off Valve	1	#50	973-010-0	Roll Pin (2×10)	2	#100	472-807-3	Spacer	1
#12	996-424-0	Packing	1	#51	973-118-0	Roll Pin (3×18)	1	#101	976-516-0	Spring (22.1×28)(2.3) Strong	1
#13	444-106-8	Valve Rod Cap	1	#52	975-106-0	Spacer (18.5×11×1)	1	#102	976-517-0	Spring (21.5×31)(2.0) Standard	1
#14	461-567-6	Bushing	1	#53	976-058-0	Spring (4.5×11) (0.4)	1	Parts for US-LT40BL			
#15	893-057-1	Reverse Valve (Lock)	1	#54	976-147-0	Spring (7×12) (0.6)	1	#82	472-319-7	Anvil	1
#16	472-211-7	Reverse Valve Bushing	1	#55	976-450-0	Spring (18.5×10) (1.0)	1	#83	981-002-0	Ball (1/8)	1
#17	472-782-7	Exhaust Deflector	1	#56	977-071-0	Cone Spring (5.5×11.5×15)	1	Parts for US-LT40AL			
#18	161-835-4	Filter (K50)	1	#57	977-155-0	Cone Spring (7×10×35)	1	#85	472-319-6	Anvil	1
#19	467-285-7	Rear Plate	1	#58	978-218-0	Snap Ring (22×1)	1	#86	981-003-0	Ball (5/32)	1
#20	472-286-7	Cylinder	1	#59	979-326-0	Inner Snap Ring (IRTW-26)	1	Standard Accessories			
#21	472-287-7	Rotor	1	#60	981-001-0	Ball (3/32)	21	#84	916-810-0	(+) Double Bit (No.2×75) for US-LT40BL	1
#22	425-288-4	Blade (PC)	5	#61	981-004-0	Ball (3/16)	5	#87	916-710-0	(+) Double Bit (No.2×70) for US-LT40AL	1
#23	472-289-7	Front Plate	1	#62	982-063-0	Ball Bearing (606ZZ)	1	#93	939-402-0	Manual Driver (No.2)	1
#24	461-291-6	Rear Plate Spacer	1	#63	982-100-0	Ball Bearing (6000)	1	#96	940-113-0	Air Hose Nipple (NPT 1/4×1/4)	1
#25	472-029-7	Gear Casing	1	#64	987-039-0	Miniature Ball Bearing (R1560ZZ)	1	Optional Accessories			
#26	472-807-7	Spacer	1	#65	990-911-0	O-Ring (SNS-12)	1	#88	472-082-7	Bit Casing Set Screw	1
#27	496-483-1	Gear Cage Spacer	1	#66	990-923-0	O-Ring (SNS-26)	1	#89	471-057-7	Bit Casing	1
#28	463-369-7	Clutch Casing	1	Parts for US-LT40L-08				#90	917-350-0	Finder (7.3×56×24-4E)	1
#29	472-346-5	Cam	1	#67	472-460-7	Rotor Gear	1	#91	916-330-0	Spring (13.8×18)(0.8)	1
#30	463-397-7	Back-up Spacer	1	#68	472-480-7	First Gear Cage	1	#92	916-030-0	(-) Bit (5×56) (6.35H)	1
#31	472-375-7	Cam Ring	1	#69	472-470-7	First Planet Gear	3	#94	472-516-7	Dead Handle	1
#32	472-379-8	Retainer	1	#70	472-485-7	Second Gear Cage	1	#95	945-222-0	Allen Head Bolt (M6×22)	1
#33	471-318-5	Pilot Pin	1	#71	472-471-7	Second Planet Gear	3				
#34	471-764-7	Notch Pin	1	#72	976-515-0	Spring (22.7×28)(2.6) Standard	1				
#35	472-562-8	Spring Holder	1	#73	976-516-0	Spring (22.1×28)(2.3) Weak	1				
#36	472-257-8	Regulating Screw	1	#74	976-517-0	Spring (21.5×31)(2.0) Weaker	1				
#37	472-351-7	Bit Sleeve	1	Parts for US-LT40L-15							
#38	472-567-7	Bushing	1	#75	472-460-5	Rotor Gear	1				
#39	472-370-7	Clutch Casing Sleeve	1								
#40	471-670-7	Band	1								

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-330-24-10-17-0507