


UA130MC OIL-PULSE WRENCHES


EXPLODED VIEW

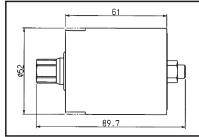

Liner Casing Assembly

Code No. 17F-911-7

(This assembly is made up of parts #19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 42, 43, 45, 50, 51, 52, 60, 61, 70, 71, 72, 73 and 74.)

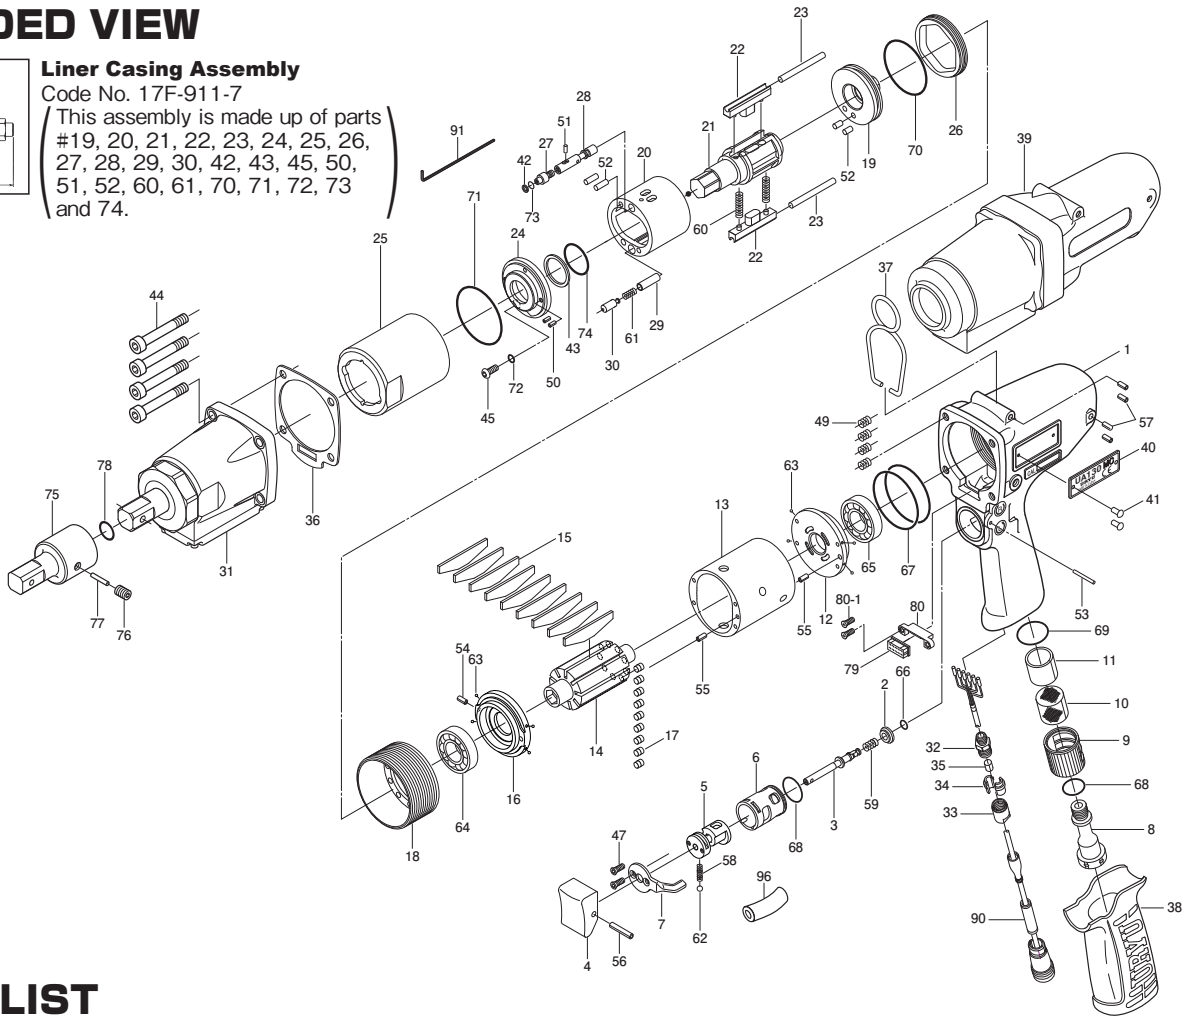

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	17F-025-7	Handle	1	#31	851-693-1	Sensor Casing Assembly (S15S-UL)	1	#63	981-045-0	Ball (1.5)	9
# 2	130-100-2	Valve	1	#32	851-301-1	Connector	1	#64	982-905-0	Ball Bearing (6904)	1
# 3	130-104-2	Valve Rod	1	#33	851-302-1	Cap	1	#65	982-950-0	Ball Bearing (16002)	1
# 4	130-107-2	Valve Lever	1	#34	851-303-1	Stopper	2	#66	990-306-0	O-Ring (APR-568-004)	1
# 5	130-210-2	Reverse Valve	1	#35	131-395-8	Outer Ring	1	#67	990-611-0	O-Ring (51.5×2)	2
# 6	130-211-2	Reverse Valve Bushing	1	#36	132-867-3	Front Casing Packing	1	#68	990-916-0	O-Ring (SNS-18)	2
# 7	130-212-2	Reverse Lever	1	#37	174-790-0	Suspension Ring	1	#69	990-921-0	O-Ring (SNS-22.4)	1
# 8	130-091-2	Air Inlet Bushing	1	#38	17F-842-7	Handle Cover	1	#70	990-930-0	O-Ring (SNS-40)	1
# 9	130-780-2	Exhaust Stack	1	#39	132-840-3	Casing Protector	1	#71	990-932-0	O-Ring (SNS-42)	1
#10	130-042-2	Silencer	1	#40	17F-924-7	Metal Tag (UA130MC)	1	#72	990-971-0	O-Ring (SNS-3)	1
#11	130-835-3	Filter (K100)	1	#41	930-205-0	Drive Rivet	2	#73	990-972-0	O-Ring (SNS-4)	1
#12	130-285-2	Rear Plate	1	#42	944-205-0	Supporting Ring (5.1×7×1)	1	#74	992-021-0	SU-Ring (Q16)	1
#13	123-286-6	Cylinder	1	#43	944-215-0	Back-up Ring (16×19.9×1.5)	1	#75	904-190-0	Extension Bar (1/2×60)	1
#14	123-287-6	Rotor	1	#44	945-420-0	Allen Head Bolt (M6×20)	4	#76	953-205-0	Allen Head Screw (M5×5)	1
#15	123-288-6	Blade	9	#45	945-942-0	Hexagon Round Head Bolt (M4×6)	1	#77	971-220-0	Pin (3×20)	1
#16	123-289-6	Front Plate	1	#47	948-423-0	Allen Flush Head Screw (M3×6)	2	#78	990-016-0	O-Ring (P-16)	1
#17	148-064-2	Plug	9	#49	965-021-0	Heli-Sert (M6×1.5D)	4	#79	909-918-0	Double-Row Socket (DF11-12DS-2C)	1
#18	123-036-6	Hammer Casing Connector	1	#50	969-450-0	Pin (G)(3×8)	2	#80	911-017-0	Connector Cover	1
#19	17F-901-7	Rear Liner Plate	1	#51	970-092-0	Pin (H)(2×5.5)	1	#80-1	957-256-0	Cross Head Screw (M2×5)	2
#20	17F-902-7	Liner	1	#52	970-206-0	Pin (H)(3×8)	4	ACCESSORIES			
#21	123-319-7	Anvil	1	#53	971-126-0	Pin (2×26)	1	#90	911-061-0	Joint Cable Assembly	1
#22	130-440-2	Driving Blade	2	#54	973-006-0	Roll Pin (2×6)	1	#91	939-109-0	Allen Wrench (2)	1
#23	130-974-2	Roller Pin (2.5×30)	2	#55	973-108-0	Roll Pin (3×8)	2	#92	939-105-0	Allen Wrench (4)	1
#24	17F-904-7	Front Liner Plate	1	#56	973-120-0	Roll Pin (3×20)	1	#93	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#25	130-905-2	Liner Casing	1	#57	973-308-0	Roll Pin (5×8)	4	#94	909-798-0	Solenoid Valve Assembly	1
#26	130-906-2	Liner Casing Cover	1	#58	976-006-0	Spring (3×5)	1	#95	911-068-0	Sensor Cable Assembly (3F5)	1
#27	175-907-9	Relief Valve Spindle	1	#59	976-643-0	Spring (7.5×9.7)	1	#96	910-633-0	Connector Protector (Option)	1
#28	17F-970-7	Relief Valve	1	#60	976-801-0	Spring (4.5×35.5)WPC	2				
#29	17F-274-7	Spring Holder	1	#61	976-875-0	Spring (4.3×26)	1				
#30	17F-276-7	Pressure Adjusting Valve	1	#62	981-002-0	Ball (1/8)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-555-21-04-07-PDF*