


UAT200 SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

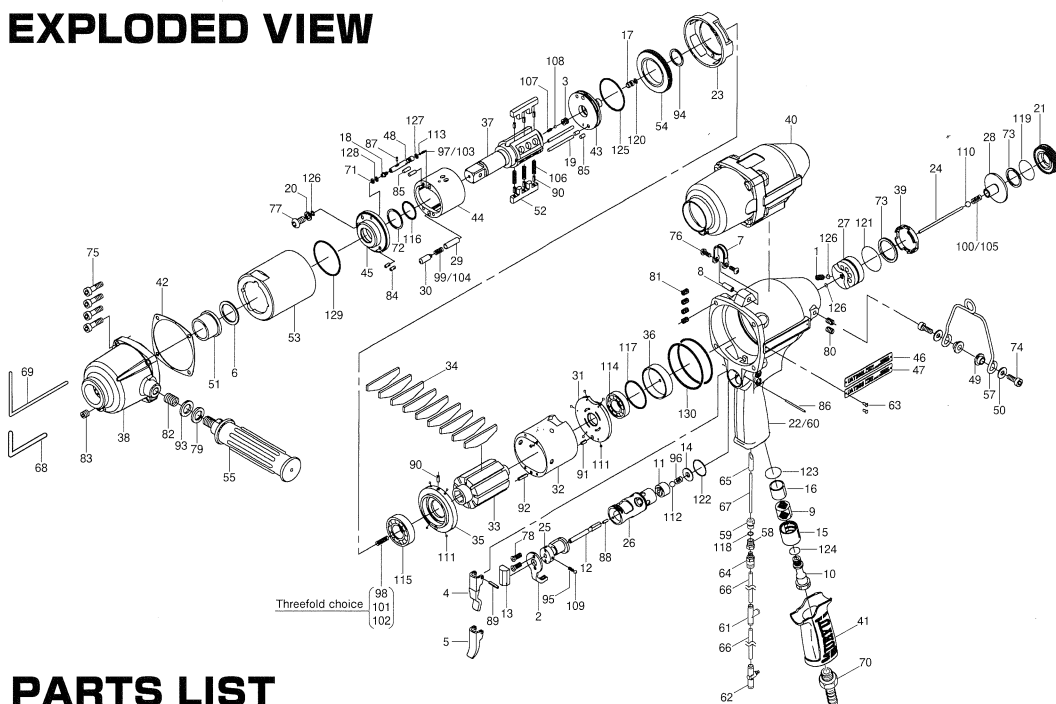

#56 Suspension Bail Assembly consists of #49, #50, #57 and #74.

Magnified view seen from side

#61 909-442-0
Quick Exhaust (AQ240F-04-00)

#62 909-449-0
Speed Controller (AS1001F)
for TM-type

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
COMMON PARTS FOR UAT200 & UAT200L				#52	194-440-9	Driving Blade	2	#125	990-943-0	O-Ring (SNS-63)	1
#1	128-108-2	Valve Plug	1	#53	194-905-8	Liner Casing	1	#126	990-949-0	O-Ring (P3) (NOK)	3
#2	128-212-2	Reverse Lever	1	#54	194-906-8	Liner Casing Cover	1	#127	990-973-0	O-Ring (SNS-5) (NOK)	1
#3	128-929-2	Check Valve Cover	1	#63	930-205-0	Drive Rivet (No.0×2.6)	2	#128	990-977-0	O-Ring (SNS-7) (NOK)	1
#4	130-107-2	Valve Lever	1	#71	944-208-0	Back-up Ring (8.1×10×1)	1	#129	990-990-0	O-Ring (SNS-65)	1
#6	130-327-5	Anvil Front Spacer	1	#72	944-225-0	Back-up Ring (25.2×29.4×1.5)	1	#130	990-995-0	O-Ring (SNS-80) (NOK)	2
#7	136-790-7	Suspension Bail	1	#73	944-233-0	Back-up Ring (28×36×1.5)	2	PARTS FOR UAT200			
#8	136-791-7	Suspension Bail Base	1	#75	945-222-0	Allen Head Bolt (M6×22)	4	#46	18H-924-3	Name Plate	1
#9	163-042-3	Silencer	1	#76	945-941-0	Allen Head Button Bolt (M4×5)	2	#97	976-564-0	Spring (5.7×13.6)	1
#10	163-091-6	Air Inlet Bushing	1	#77	945-960-0	Allen Head Bolt (M6×8)	1	#99	976-572-0	Spring (5.8×30) (0.7)	1
#11	163-100-6	Valve	1	#78	948-423-0	Allen Head Screw (M3×6)	2	#100	976-573-0	Spring (5.5×16) (0.8)	1
#12	163-104-6	Valve Rod	1	#80	965-010-0	Heli-sert (M5×1D)	2	PARTS FOR UAT200L			
#13	163-106-6	Valve Rod Cap	1	#81	965-021-0	Heli-sert (M6×1.5D)	4	#47	18H-924-4	Name Plate	1
#14	163-109-6	Valve Spring Setter	1	#82	965-058-0	Heli-sert (M12×1D)	1	#103	976-576-0	Spring (5.5×13.5) (0.7)	1
#15	163-780-6	Exhaust Stack	1	#83	966-100-0	Allen Head Plug (1/8)	1	#104	976-577-0	Spring (5.8×28.5) (0.7)	1
#16	163-835-5	Filter (K100)	1	#84	969-408-0	Pin (B) (5×10)	2	#105	976-578-0	Spring (5.3×15.5) (0.7)	1
#17	173-546-3	Piston	1	#85	970-408-0	Pin (H) (5×8)	4	PARTS FOR UAT200(TM) & 200L(TM)			
#18	173-907-3	Relief Valve Spindle	1	#86	971-130-0	Pin (2×30)	1	#58	851-955-1	Connecting Screw	1
#19	176-974-5	Roller Pin (4.4×55)	2	#87	972-008-0	Roller Pin (2×8)	1	#59	851-967-1	Plug	1
#20	188-807-1	Spacer	1	#88	972-090-0	Roller Pin (3×10)	1	#60	852-566-1	Handle	1
#21	18H-019-3	Valve Cover	1	#89	973-120-0	Roll Pin (3×20)	1	#61	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#22	18H-025-3	Handle	1	#90	973-208-0	Roll Pin (4×8)	7	#64	933-281-0	One-Touch Connector (KQ2H04-M5N)	1
#23	18H-027-3	Separator	1	#91	973-212-0	Roll Pin (4×12)	1	#65	935-240-0	Nylon Tube (18NY)	1
#24	18H-130-3	Operating Rod (3×84.8)	1	#92	973-222-0	Roll Pin (4×22)	1	#66	935-350-0	Polyurethane Hose (F1504)	1
#25	18H-210-3	Reverse Valve	1	#94	975-863-0	Adjusting Spacer (40×25.1×t)	1	#67	935-358-0	Polyurethane Hose (TU-0212)	1
#26	18H-211-3	Reverse Valve Bushing	1	#95	976-006-0	Spring (3×5)	1	#118	990-320-0	O-Ring (ARP-568-003)	1
#27	18H-253-3	Shut-off Valve Bushing	1	#96	976-142-0	Spring (6×17.5)	1	STANDARD ACCESSORIES			
#28	18H-254-3	Shut-off Valve	1	#98	976-565-0	Spring (5.6×27) (0.8) (Strong) (Option)	1	#55	566-720-2	Dead Handle (A)	1
#29	18H-274-3	Pressure Valve Spring Cover	1	#101	976-574-0	Spring (5.6×30) (0.7) (Medium) (Standard)	1	#62	909-449-0	Speed Controller (AS1001F) for TM-type	1
#30	18H-276-3	Pressure Valve Body	1	#102	976-575-0	Spring (5.7×28.5) (0.7) (Weak) (Option)	1	#68	939-104-0	Allen Wrench (5)	1
#31	18H-285-3	Rear Plate	1	#106	976-797-0	Spring (6.35×45.5) (0.8) WPC	3	#69	939-111-0	Allen Wrench (3)	1
#32	18H-286-3	Cylinder	1	#107	976-812-0	Spring (2.4×5.4)	1	#70	940-125-0	Air Hose Nipple (NPT 3/8×1/2)	1
#33	18H-287-3	Rotor	1	#108	981-001-0	Ball (3/32) (Steel)	1	#79	962-013-0	Spring Washer (2-12S)	1
#34	18H-288-3	Blade	9	#109	981-002-0	Ball (1/8)	1	#93	975-127-0	Spacer (20×13×1)	1
#35	18H-289-3	Front Plate	1	#110	981-005-0	Ball (7/32)	1	OPTIONAL ACCESSORIES			
#36	18H-291-3	Rear Plate Spacer	1	#111	981-047-0	Ball (3/32) (Duracon)	9	#5	130-107-4	Valve Lever (Shorter)	1
#37	18H-319-3	Anvil	1	#112	981-206-0	Ball (1/4)	1	#49	193-791-6	Suspension Receiver	2
#38	18H-439-3	Front Casing	1	#113	981-245-0	Ball (4.5mm)	1	#50	193-792-6	Suspension Plate	2
#39	18H-684-3	Cushion Spacer	1	#114	982-104-0	Ball Bearing (6004)	1	#56	851-106-1	Suspension Bail Assembly	1
#40	18H-840-3	Casing Protector	1	#115	982-960-0	Ball Bearing (60/28)	1	#57	851-107-1	Suspension Bail	1
#41	18H-842-3	Handle Cover	1	#116	990-170-0	O-Ring (ARP-568-120) (NTN)	1	#74	945-112-0	Allen Head Bolt (5×12)	2
#42	18H-867-3	Front Casing Packing	1	#117	990-315-0	O-Ring (ARP-568-032)	1				
#43	18H-901-3	Rear Liner Plate	1	#119	990-609-0	O-Ring (34×2.3) (Ro10)	1				
#44	18H-902-3	Liner	1	#120	990-891-0	O-Ring (SNS-3) (E)	1				
#45	18H-904-3	Roll Liner Plate	1	#121	990-915-0	O-Ring (SNS-29)	1				
#48	18H-970-3	Relief Valve	1	#122	990-916-0	O-Ring (SNS-18)	1				
#51	194-328-8	Anvil Bushing	1	#123	990-917-0	O-Ring (SNS-24)	1				
				#124	990-919-0	O-Ring (SNS-22)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-560-19-03-15-0505