


UAT30SD OIL-PULSE WRENCHES

EXPLODED VIEW

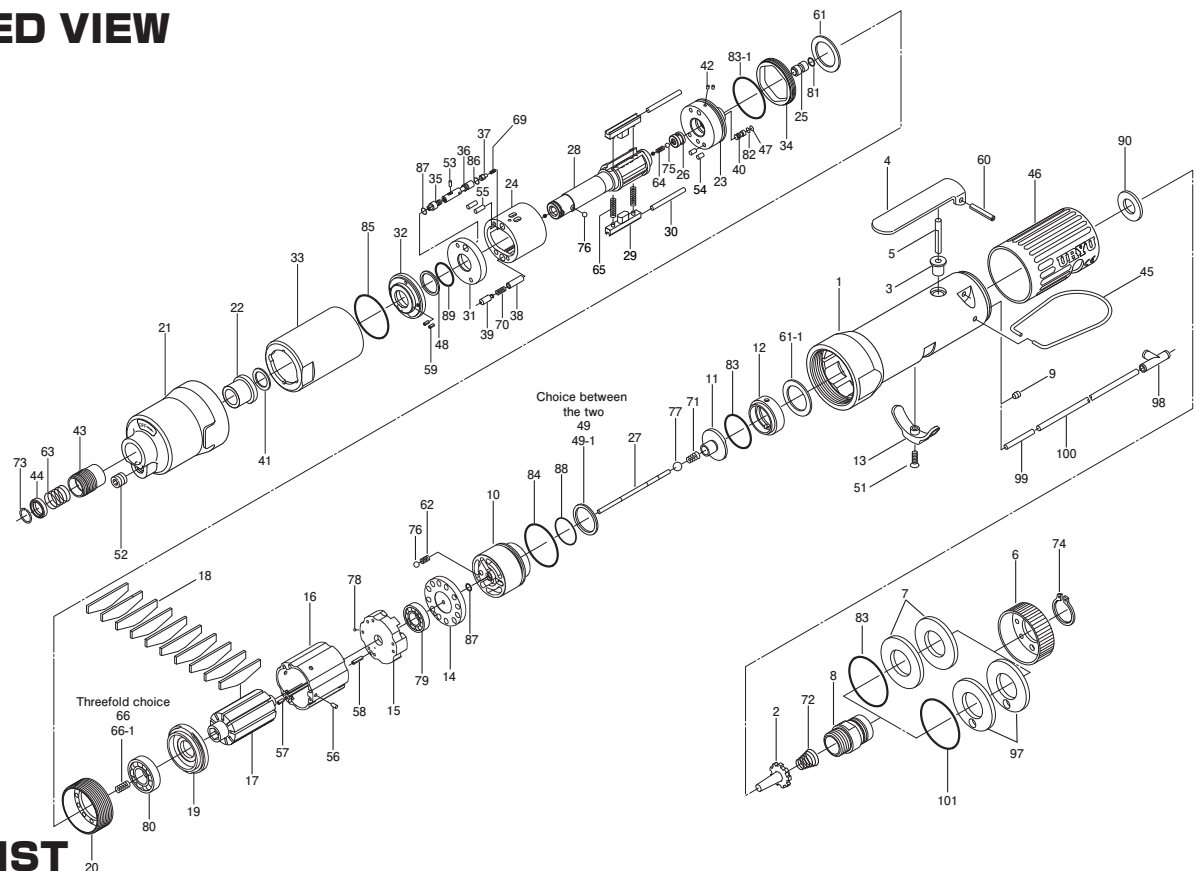

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	18H-025-1	Casing	1	#37	144-270-0	Pressure Valve	1	#73	978-117-0	Snap Ring (11.7×1)	1
# 2	259-100-0	Valve	1	#38	080-274-6	Pressure Valve Spring Collar	1	#74	979-358-0	Inner Snap Ring (ISTW-17)	1
# 3	161-103-3	Valve Rod Bushing	1	#39	18A-276-0	Pressure Valve Body	1	#75	981-001-0	Ball (3/32)	1
# 4	18D-107-8	Valve Lever	1	#40	178-742-0	Oil Plug	1	#76	981-002-0	Ball (1/8)	2
# 5	128-104-5	Valve Rod	1	#41	145-327-7	Anvil Front Spacer	1	#77	981-003-0	Ball (5/32)	1
# 6	128-782-5	Exhaust Cover	1	#42	150-064-5	Plug	2	#78	981-045-0	Ball (1.5)	1
# 7	128-835-5	Filter (K200)	2	#43	011-351-1	Bit Sleeve	1	#79	982-014-0	Ball Bearing (607)	1
# 8	128-091-8	Air Inlet Bushing	1	#44	011-352-1	Bit Spacer	1	#80	982-901-0	Ball Bearing (6901)	1
# 9	147-064-6	Filler	1	#45	010-790-1	Suspension Ring	1	#81	990-305-0	O-Ring (ARP568-003KS)	1
#10	18H-253-1	Shut-off Valve Bushing	1	#46	128-842-4	Casing Cover	1	#82	990-320-0	O-Ring (ARP568-003)	1
#11	145-254-6	Shut-off Valve	1	#47	944-002-0	Back-up Ring (2.6×4.5×1)	1	#83	990-329-0	O-Ring (JW1530-19)	2
#12	129-684-2	Cushion Spacer	1	#48	944-212-0	Back-up Ring (12×16×1.5)	1	#83-1	990-327-0	O-Ring (JW1530-18)	1
#13	161-212-3	Reverse Lever	1	#49	944-216-0	Back-up Ring (14×20×1.85)	1	#84	990-331-0	O-Ring (JW1530-21)	1
#14	18H-291-1	Rear Plate Spacer	1	#49-1	944-218-0	Back-up Ring (14×20×1.9)	1	#85	990-605-0	O-Ring (25×1.45)	1
#15	18H-285-1	Rear Plate	1	#51	948-426-0	Allen Head Screw (M3×12)	1	#86	990-621-0	O-Ring (3.8×1.8×1.0)	1
#16	18H-286-1	Cylinder	1	#52	966-099-0	Allen Head Plug (NPT1/16)	1	#87	990-970-0	O-Ring (SNS-2)	2
#17	18A-287-0	Rotor	1	#53	970-013-0	Pin (H)(1.5×4)	1	#88	990-914-0	O-Ring (SNS-16)	1
#18	18A-288-0	Blade (PC)	10	#54	970-130-0	Pin (H)(2.45×4.5)	2	#89	992-020-0	SU-Ring (Q12)	1
#19	18A-289-0	Front Plate	1	#55	970-131-0	Pin (H)(2.45×9.5)	2	#90	996-424-0	Urethane Packing (16×9×2)	1
#20	144-036-0	Hammer Casing Connector	1	#56	971-102-0	Pin (2×3.8)	1	PARTS FOR UAT30SD(TM)			
#21	144-439-0	Front Casing	1	#57	973-008-0	Roll Pin (2×8)	1	Remove 147-064-6 Plug			
#22	190-328-6	Anvil Bushing	1	#58	973-018-0	Roll Pin (2×18)	1	#97	851-065-1	Filter (K200)	2
#23	18A-901-0	Rear Liner Plate	1	#59	973-040-0	Roll Pin (1.5×5)	2	#98	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#24	18A-902-0	Liner	1	#60	973-122-0	Roll Pin (3×22)	1	#99	935-240-0	Nylon Tube (18NY)	1
#25	145-546-6	Piston	1	#61	975-752-0	Adjusting Spacer (15×10×t)	1	#100	935-350-0	Polyurethane Hose (F-1504)	1
#26	130-929-4	Check Valve Cover	1	#61-1	975-806-0	Adjusting Spacer (24×20×t)	1	#101	990-331-0	O-Ring (JW1530-21)	1
#27	147-130-6	Operating Rod (2.1×60.5)	1	#62	976-006-0	Spring (3×5)	1	ACCESSORIES			
#28	144-350-0	Driver Anvil	1	#63	976-327-0	Spring (13.5×1)	1	#110	939-091-0	Allen Wrench (1.5)	1
#29	144-440-0	Driving Blade	2	#64	976-847-0	Spring 2.4×5.3 (0.26)N=7.5	1	#111	939-105-0	Allen Wrench (4)	1
#30	145-974-0	Roller (2.5×21)	2	#65	976-782-0	Spring (3.3×16) WPC	2	#112	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#31	18A-973-0	Liner Casing Setter	1	#66	976-688-0	Spring (3.3×17.5) Standard	1	#113	916-810-0	(W) Bit No.2×75	1
#32	144-904-0	Front Liner Plate	1	#66-1	976-650-0	Spring (3.3×16) Strong	1	#114	909-449-0	Speed Controller	1
#33	144-905-0	Liner Casing	1	#69	977-557-0	Spring 2.9×6.9 (0.4)N=6.5	1				
#34	144-906-0	Liner Casing Cover	1	#70	976-777-0	Spring (3.0×13.5)	1				
#35	145-907-6	Relief Valve Spindle	1	#71	977-063-0	Cone Spring (4.1×4.7×9)(0.45)	1				
#36	18C-970-1	Relief Valve	1	#72	977-227-0	Cone Spring (9×12×25)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-553-23-07-11-0002