


UAT50 SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

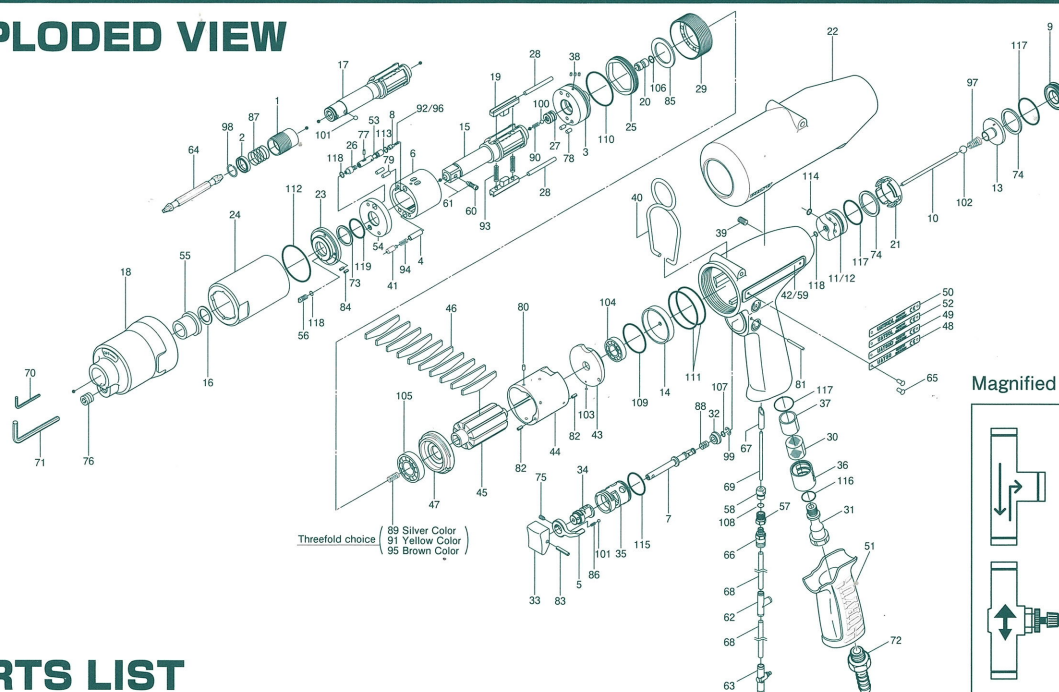

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
COMMON PARTS FOR UAT50 SERIES				# 73	944-212-0	Supporting Ring (12×16×1.5)	1	PARTS FOR UAT50D			
# 3	078-901-7	Rear Liner Plate	1	# 74	944-217-0	Supporting Ring (14×20×1.8)	2	# 49	18B-924-5	Name Plate (UAT50D)	1
# 4	080-274-6	Pressure Valve Spring Collar	1	# 75	952-106-0	Allen Head Dog Point Screw (M4×6)	1	PARTS FOR UAT50DL			
# 5	09B-212-5	Reverse Lever	1	# 76	966-099-0	Allen Head Plug (NPT1/16) (GDL)	1	# 12	145-253-8	Shut-off Valve Bushing	1
# 6	10C-902-1	Liner	1	# 77	970-013-0	Pin (H) (1.5×4)	1	# 50	18B-924-7	Name Plate (UAT50DL)	1
# 7	142-104-6	Valve Rod	1	# 78	970-130-0	Pin (H) (2.45×4.5)	2	# 92	976-676-0	Spring (2.7×7.4) (0.4)	1
# 8	144-270-0	Pressure Valve	1	# 79	970-131-0	Pin (H) (2.45×9.5)	2	PARTS FOR UAT50 & UAT50D			
# 9	145-019-6	Valve Cover	1	# 80	971-102-0	Pin (2×3.8)	1	# 11	145-253-6	Shut-off Valve Bushing	1
# 10	145-130-0	Operating Rod (2.1×50.9)	1	# 81	971-123-0	Pin (2×23)	1	PARTS FOR UAT50, UAT50L, UAT50D			
# 13	145-254-6	Shut-off Valve	1	# 82	973-008-0	Roll Pin (2×8)	2	# 96	976-881-0	Spring (2.7×7.6) (0.4)	1
# 14	145-291-7	Rear Plate Spacer	1	# 83	973-014-0	Roll Pin (2×14)	1	PARTS FOR UAT50 & UAT50L			
# 16	145-327-7	Anvil Front Spacer	1	# 84	973-040-0	Roll Pin (1.5×5)	2	# 15	145-319-0	Anvil (P)	1
# 18	145-439-0	Front Casing	1	# 85	975-752-0	Adjusting Spacer (15×10×t)	1	# 60	891-300-1	Socket Pin Assembly	1
# 19	145-440-0	Driving Blade	2	# 86	976-006-0	Spring (3×5) (0.4)	1	# 61	891-554-1	Anvil Assembly (#15 and #60)	1
# 20	145-546-6	Piston	1	# 88	976-457-0	Spring (7×12) (0.9)	1	PARTS FOR UAT50D & UAT50DL			
# 21	145-684-6	Cushion Spacer	1	# 89	976-650-0	Spring (3.3×16) (Weak) (Option)	1	# 1	011-351-1	Bit Sleeve	1
# 22	145-840-7	Casing Cover	1	# 90	976-653-0	Spring (2.4×5) (0.26)	1	# 2	011-352-1	Bit Spacer	1
# 23	145-904-6	Front Liner Plate	1	# 91	976-662-0	Spring (3.3×18) (Strong) (Option)	1	# 17	145-350-2	Driver Anvil	1
# 24	145-905-0	Liner Casing	1	# 93	976-791-0	Spring (3.3×21) (0.4) WPC	2	# 87	976-327-0	Spring (13.5×11)	1
# 25	145-906-6	Liner Casing Cover	1	# 94	976-841-0	Spring (3.0×11.4) (0.35)	1	# 98	978-117-0	Snap Ring (11.7×1)	1
# 26	145-907-6	Relief Valve Spindle	1	# 95	976-857-0	Spring (3.3×17) (Medium) (Standard)	1	#101	981-002-0	Ball (1/8)	1
# 27	145-929-6	Check Valve Cover	1	# 97	977-063-0	Cone Spring (4.1×4.7×9) (0.45) 3/4	1	# 57	851-955-1	Connecting Screw	1
# 28	145-974-0	Roller Pin (2.5×21)	2	# 99	979-405-0	Outer Snap Ring (E2.5)	1	# 58	851-967-1	Plug	1
# 29	147-036-2	Hammer Casing Connector	1	#100	981-001-0	Ball (3/32)	1	# 59	852-593-1	Handle	1
# 30	147-042-2	Silencer	1	#101	981-002-0	Ball (1/8)	1	# 62	909-442-0	Quick Exhaust (AQ240F-04-00)	1
# 31	147-091-2	Air Inlet Bushing	1	#102	981-003-0	Ball (5/32)	1	# 66	933-281-0	One-Touch Connector (KQ2H04-M5N)	1
# 32	147-100-3	Valve	1	#103	981-045-0	Ball (1.5)	1	# 67	935-240-0	Nylon Tube (18NY)	1
# 33	147-107-2	Valve Lever	1	#104	982-014-0	Ball Bearing (607)	1	# 68	935-350-0	Polyurethan Hose (F1504)	1
# 34	147-210-2	Reverse Valve	1	#105	982-902-0	Ball Bearing (6901)	1	# 69	935-358-0	Polyurethan Hose (TU-0212)	1
# 35	147-211-2	Reverse Valve Bushing	1	#106	990-305-0	O-Ring (ARP568-003) (KS)	1	#108	990-320-0	O-Ring (ARP568-003)	1
# 36	147-780-3	Exhaust Stack	1	#107	990-306-0	O-Ring (ARP568-004) (H)	1	COMMON ACCESSORIES FOR UAT50 SERIES			
# 37	147-835-3	Filter (K200)	1	#109	990-327-0	O-Ring (JW1530-18)	1	# 70	939-091-0	Allen Wrench (1.5)	1
# 38	150-064-5	Plug	3	#110	990-329-0	O-Ring (JW1530-19)	1	# 71	939-105-0	Allen Wrench (4)	1
# 39	150-108-5	Valve Plug	1	#111	990-337-0	O-Ring (JW1530-27)	2	# 72	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
# 40	174-790-0	Suspension Ring	1	#112	990-605-0	O-Ring (25×1.45)	1	ACCESSORIES FOR UAT50D & UAT50DL			
# 41	18A-276-4	Pressure Valve Body	1	#113	990-621-0	O-Ring (3.8×1.8×1.0)	1	# 64	916-810-0	(+) Double Bit (No.2×75)	1
# 42	18B-025-3	Handle	1	#114	990-901-0	O-Ring (SNS-3)	1	ACCESSORIES FOR (TM) TYPE UAT50 SERIES			
# 43	18B-285-2	Rear Plate	1	#115	990-912-0	O-Ring (SNS-14)	1	# 63	909-449-0	Speed Controller (AS1001F)	1
# 44	18B-286-2	Cylinder	1	#116	990-914-0	O-Ring (SNS-16)	1				
# 45	18B-287-2	Rotor	1	#117	990-916-0	O-Ring (SNS-18)	3				
# 46	18B-288-2	Blade	10	#118	990-970-0	O-Ring (SNS-2) (NOK)	3				
# 47	18B-289-2	Front Plate	1	#119	992-020-0	SU Ring Q12 (NTN)	1				
# 51	18C-842-8	Handle Cover	1	PARTS FOR UAT50							
# 53	18C-970-1	Relief Valve	1	# 48	18B-924-2	Name Plate (UAT50)	1				
# 54	18C-973-8	Liner Casing Spacer	1	PARTS FOR UAT50L							
# 55	190-328-6	Anvil Bushing	1	# 12	145-253-8	Shut-off Valve Bushing	1				
# 56	194-742-0	Oil Plug	1	# 52	18C-924-1	Name Plate (UAT50L)	1				
# 65	930-205-0	Drive Rivet (No.0×2.6)	2								

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-533-24-09-25-1010