


UAT60 SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

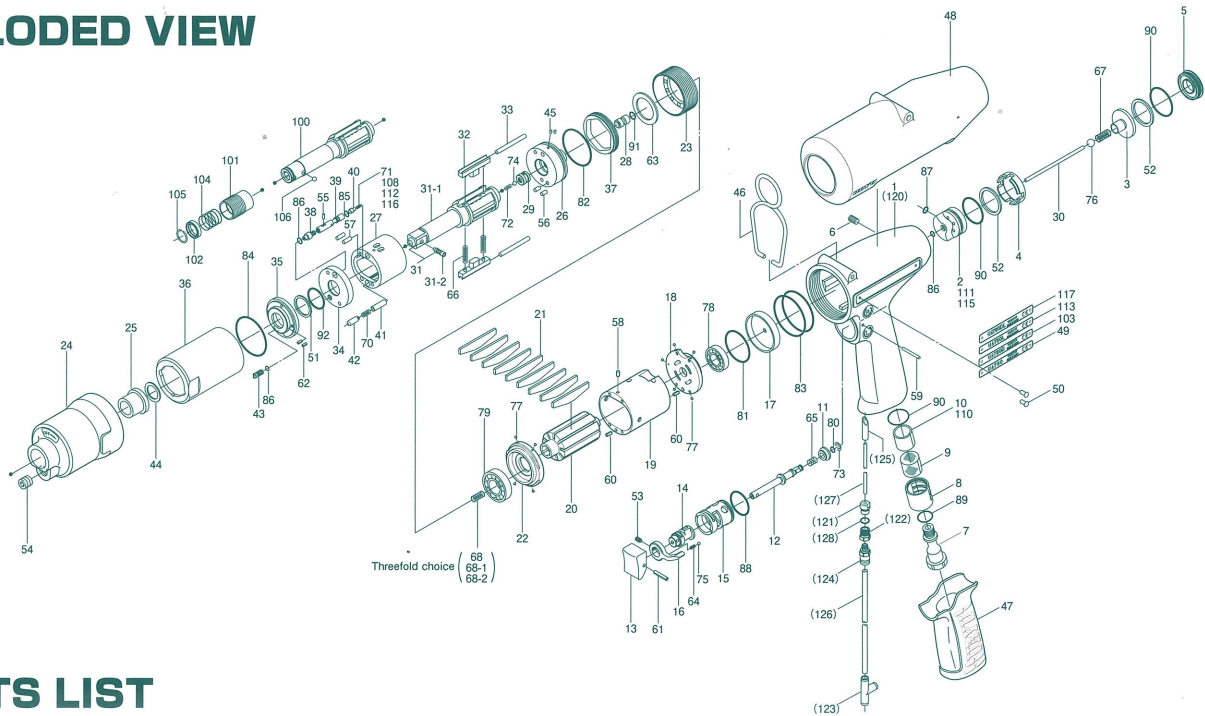

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	18C-025-8	Handle	1	#45	150-064-5	Plug	3	#90	990-916-0	O-Ring (SNS-18)	3
# 2	145-253-6	Shut-off Valve Bushing	1	#46	174-790-0	Suspension Ring	1	#91	990-305-0	O-Ring (APR-568-003KS)	1
# 3	145-254-6	Shut-off Valve	1	#47	18C-842-8	Handle Cover	1	#92	992-020-0	SU Ring Q12(NTN)	1
# 4	145-684-6	Cushion Spacer	1	#48	145-840-8	Casing Cover	1	PARTS FOR UAT60D			
# 5	145-019-6	Valve Cover	1	#49	18C-924-8	Name Plate	1	#100	145-350-7	Driver Anvil	1
# 6	150-108-5	Valve Plug	1	#50	930-205-0	Drive Rivet (No.0×2.6)	2	#101	011-351-1	Bit Sleeve (1/8)	1
# 7	147-091-2	Air Inlet Bushing	1	#51	944-212-0	Supporting Ring (12×16×1.5)	1	#102	011-352-1	Bit Spacer	1
# 8	147-780-3	Exhaust Stack	1	#52	944-217-0	Supporting Ring (14×20×1.8)	2	#103	18D-924-1	Name Plate	1
# 9	147-042-2	Silencer	1	#53	952-106-0	Allen Head Dog Point Screw (M4×6)	1	#104	976-327-0	Spring (13.5×11)	1
#10	145-835-6	Filter (K50)	1	#54	966-099-0	Allen Head Plug (NPT1/16)	1	#105	978-117-0	Snap Ring (11.7×1)	1
#11	147-100-3	Valve	1	#55	970-013-0	Pin (H) (1.5×4)	1	#106	981-002-0	Ball (1/8)	1
#12	142-104-6	Valve Rod	1	#56	970-130-0	Pin (H) (2.45×4.5)	2	#108	976-631-0	Spring (2.8×7.5) (0.45)	1
#13	147-107-2	Valve Lever	1	#57	970-131-0	Pin (H) (2.45×9.5)	2	PARTS FOR UAT60L			
#14	147-210-2	Reverse Valve	1	#58	971-102-0	Pin (2×3.8)	1	#110	145-835-8	Filter (K100)	1
#15	147-211-2	Reverse Valve Bushing	1	#59	971-123-0	Pin (2×23)	1	#111	145-253-8	Shut-off Valve Bushing	1
#16	09B-212-5	Reverse Lever	1	#60	973-008-0	Roll Pin (2×8)	2	#112	976-998-0	Spring (2.9×7.5) (0.45)	1
#17	145-291-7	Rear Plate Spacer	1	#61	973-014-0	Roll Pin (2×14)	1	#113	18D-924-7	Name Plate	1
#18	145-285-6	Rear Plate	1	#62	973-040-0	Roll Pin (1.5×5)	2	PARTS FOR UAT60DL			
#19	145-286-6	Cylinder	1	#63	975-752-0	Adjusting Spacer (15×10×t)	1	#72	976-653-0	Spring (2.4×5) (0.26)	1
#20	145-287-6	Rotor	1	#64	976-006-0	Spring (3×5)	1	#110	145-835-8	Filter (K100)	1
#21	147-288-2	Blade	9	#65	976-457-0	Spring (7×12)	1	#115	145-253-9	Shut-off Valve Bushing	1
#22	145-289-6	Front Plate	1	#66	976-792-0	Spring (3.5×21)	2	#116	976-882-0	Spring (2.7×7.5) (0.4)	1
#23	147-036-2	Hammer Casing Connector	1	#67	977-056-0	Cone Spring (4.1×4.7×9.4)	1	#117	18D-924-3	Name Plate	1
#24	145-439-7	Front Casing	1	#68	976-650-0	Spring (3.3×16) (Weak) (Silver)	1	PARTS FOR TM			
#25	190-328-6	Anvil Bushing	1	#68-1	976-857-0	Spring (3.3×17) (Medium) (Brown)	1	#120	852-596-1	Handle	1
#26	18C-901-9	Rear Liner Plate	1	#68-2	976-662-0	Spring (3.3×18) (Strong) (Gold)	1	#121	851-967-1	Plug	1
#27	10E-902-1	Liner	1	#70	976-999-0	Spring (3.0×12) (0.4)	1	#122	851-955-1	Connecting Screw	1
#28	145-546-6	Piston	1	#71	976-636-0	Spring (2.8×7.4) (0.45)	1	#123	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#29	145-929-6	Check Valve Cover	1	#72	976-653-0	Spring (2.4×5) (0.26)	1	#124	933-281-0	One-Touch Connector (KJH04-M5)	1
#30	145-130-6	Operating Rod	1	#73	979-405-0	Outer Snap Ring (E2.5)	1	#125	935-240-0	Nylon Tube (18NY)	1
#31	891-552-1	Anvil Assembly	1	#74	981-001-0	Ball (3/32)	1	#126	935-350-0	Polyurethane Hose (F1504)	1
#31-1	145-319-6	Anvil	1	#75	981-002-0	Ball (1/8)	1	#127	935-358-0	Polyurethane Hose (TU-0212)	1
#31-2	891-300-1	Socket Pin Assembly	1	#76	981-003-0	Ball (5/32)	1	#128	990-320-0	O-Ring (APR568-003)	1
#32	145-440-6	Driving Blade	2	#77	981-045-0	Ball (1.5)	9	ACCESSORIES			
#33	145-974-6	Roller (2.5×26)	2	#78	982-014-0	Ball Bearing (607)	1	#130	939-091-0	Allen Wrench (1.5)	1
#34	18C-973-8	Liner Casing Spacer	1	#79	982-902-0	Ball Bearing (6901)	1	#131	939-105-0	Allen Wrench (4)	1
#35	145-904-6	Front Liner Plate	1	#80	990-306-0	O-Ring (ARP568-004)	1	#132	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#36	145-905-6	Liner Casing	1	#81	990-327-0	O-Ring (JW1530-18)	1	#133	916-810-0	(W) Bit for Driver type	1
#37	145-906-6	Liner Casing Cover	1	#82	990-329-0	O-Ring (JW-1530-19)	1	#134	909-449-0	Speed Controller for TM-type	1
#38	145-907-6	Relief Valve Spindle	1	#83	990-337-0	O-Ring (JW1530-27)	2				
#39	094-970-4	Relief Valve	1	#84	990-605-0	O-Ring (25×1.45)	1				
#40	144-270-0	Pressure Valve	1	#85	990-621-0	O-Ring (3.8×1.8×1.0)	1				
#41	080-274-6	Pressure Valve Spring Collar	1	#86	990-970-0	O-Ring (SNS-2) (NOK)	3				
#42	18E-276-3	Pressure Valve Body	1	#87	990-901-0	O-Ring (SNS-3)	1				
#43	194-742-0	Oil Plug	1	#88	990-912-0	O-Ring (SNS-14)	1				
#44	145-327-7	Anvil Front Spacer	1	#89	990-914-0	O-Ring (SNS-16)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-534-24-07-17-1008