


UAT70S SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

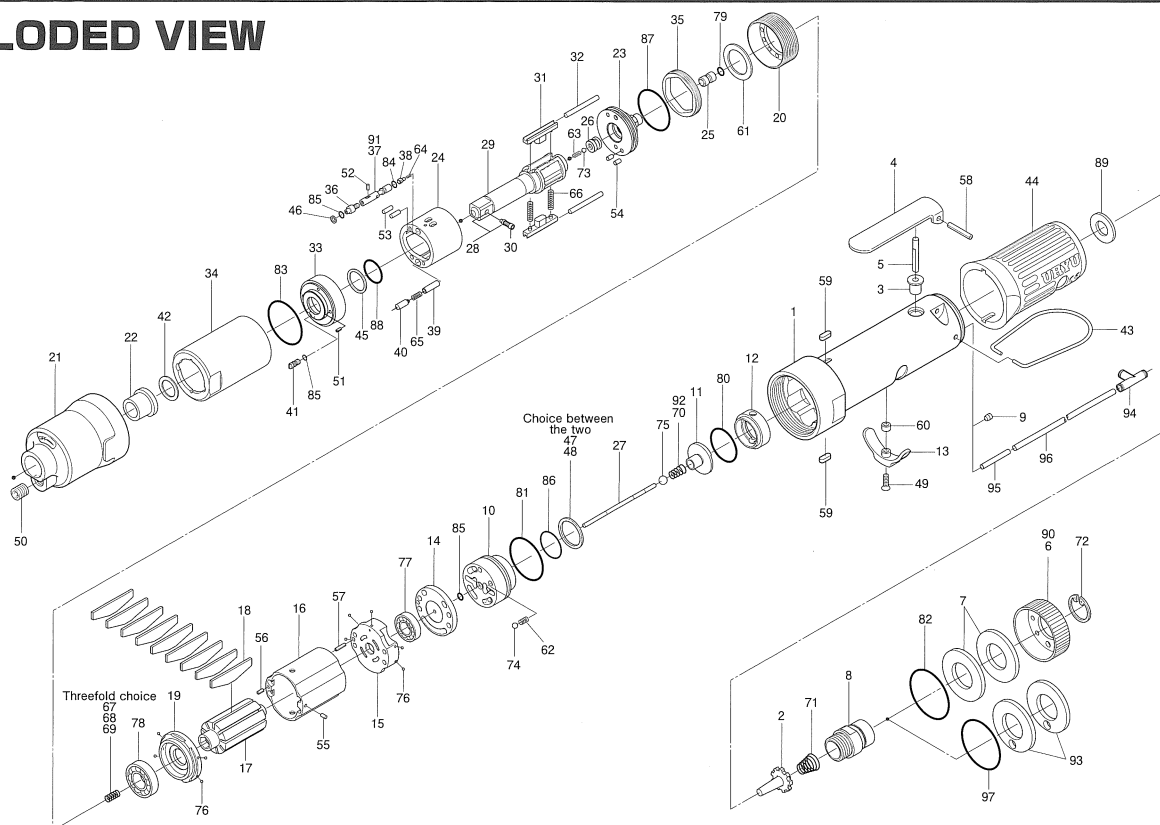

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	18E-025-9	Casing	1	#37	083-970-7	Relief Valve	1	#73	981-001-0	Ball (3/32)	1
# 2	259-100-0	Valve	1	#38	144-270-0	Pressure Valve	1	#74	981-002-0	Ball (1/8)	1
# 3	161-103-3	Valve Rod Bushing	1	#39	18F-274-2	Pressure Valve Spring Collar	1	#75	981-003-0	Ball (5/32)	1
# 4	18D-107-8	Valve Lever	1	#40	18E-276-3	Pressure Valve Body	1	#76	981-045-0	Ball (1.5)	9
# 5	128-104-8	Valve Rod	1	#41	194-742-0	Oil Plug	1	#77	982-014-0	Ball Bearing (607)	1
# 6	128-782-8	Exhaust Cover	1	#42	178-327-0	Anvil Front Spacer	1	#78	982-902-0	Ball Bearing (6901)	1
# 7	128-835-8	Filter (K200)	2	#43	191-790-1	Suspension Ring	1	#79	990-305-0	O-Ring (ARP568-003KS)	1
# 8	128-091-8	Air Inlet Bushing	1	#44	129-842-7	Casing Cover	1	#80	990-329-0	O-Ring (JW1530-19)	1
# 9	147-064-6	Filler	1	#45	944-013-0	Back-up Ring (P-12)	1	#81	990-331-0	O-Ring (JW1530-21)	1
#10	129-253-2	Shut-off Valve Bushing	1	#46	944-203-0	Back-up Ring (3.1×5×1)	1	#82	990-603-0	O-Ring (28.5×1.3)	1
#11	145-254-6	Shut-off Valve	1	#47	944-216-0	Back-up Ring (14×20×1.85)	1	#83	990-334-0	O-Ring (JW1530-24)	1
#12	129-684-6	Cushion Spacer	1	#48	944-218-0	Back-up Ring (14×20×1.9)	1	#84	990-621-0	O-Ring (3.8×1.8×1.0)	1
#13	161-212-3	Reverse Lever	1	#49	948-426-0	Allen Head Screw (M3×12)	1	#85	990-970-0	O-Ring (SNS-2)	3
#14	128-291-8	Rear Plate Spacer	1	#50	966-099-0	Allen Head Plug (NPT1/16)	1	#86	990-914-0	O-Ring (SNS-16)	1
#15	129-285-2	Rear Plate	1	#51	969-449-0	Pin (G)(3×6)	1	#87	990-923-0	O-Ring (SNS-26)	1
#16	129-286-7	Cylinder	1	#52	970-013-0	Pin (H)(1.5×4)	1	#88	992-020-0	SU-Ring (Q12)	1
#17	129-287-6	Rotor	1	#53	970-204-0	Pin (H)(3×6)	1	#89	996-424-0	Urethane Packing (16×9×2)	1
#18	129-288-6	Blade (PC)	9	#54	970-202-0	Pin (H)(3×4.5)	2	PARTS FOR UAT70SL			
#19	128-289-8	Front Plate	1	#55	971-102-0	Pin (2×3.8)	1	#90	129-782-0	Exhaust Deflector	1
#20	147-036-6	Hammer Casing Connector	1	#56	973-008-0	Roll Pin (2×8)	1	#91	976-521-0	Spring (2.9×6.9)	1
#21	147-439-6	Front Casing	1	#57	973-018-0	Roll Pin (2×18)	1	#92	977-046-0	Cone Spring (4.0×4.6×9)	1
#22	190-328-6	Anvil Bushing	1	#58	973-122-0	Roll Pin (3×22)	1	PARTS FOR (TM) TYPE			
#23	083-901-7	Rear Liner Plate	1	#59	974-008-0	Key (3×8)	2	Remove 147-064-6 Plug			
#24	18E-902-3	Liner	1	#60	975-004-0	Spacer (5.5×3.1×2.7)	1	#93	851-053-1	Filter (K200)	1
#25	145-546-6	Piston	1	#61	975-752-0	Adjusting Spacer (15×10×t)	1	#94	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#26	145-929-6	Check Valve Cover	1	#62	976-006-0	Spring (3×5)	1	#95	935-240-0	Nylon Tube (18NY)	1
#27	129-130-6	Operating Rod (2.1×70.7)	1	#63	976-645-0	Spring (2.4×5)	1	#96	935-350-0	Polyurethane Hose (F-1504)	1
#28	891-550-1	Anvil Assembly (P)	1	#64	976-604-0	Spring (2.9×7.1)	1	#97	990-333-0	O Ring (JW1530-23)	1
#29	18E-319-3	Anvil	1	#65	976-755-0	Spring (3×13.3)	1	ACCESSORIES			
#30	891-300-1	Socket Pin Assembly	1	#66	976-788-0	Spring (3.5×25) WPC	2	#98	939-091-0	Allen Wrench (1.5)	1
#31	147-440-6	Driving Blade	2	#67	976-650-0	Spring (3.3×16) (Weak)	1	#99	939-105-0	Allen Wrench (4)	1
#32	147-974-6	Roller (2.5×28)	2	#68	976-857-0	Spring (3.3×17) (Standard)	1	#100	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#33	18E-904-3	Front Liner Plate	1	#69	976-662-0	Spring (3.3×18) (Strong)	1	#101	909-449-0	Speed Controller	1
#34	147-905-6	Liner Casing	1	#70	977-045-0	Cone Spring (4×4.6×9)	1				
#35	147-906-6	Liner Casing Cover	1	#71	977-227-0	Cone Spring (9×12×25)	1				
#36	174-907-2	Relief Valve Spindle	1	#72	979-358-0	Inner Snap Ring (ISTW-17)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-554-18-03-27-0503