


US-40 & 41 SCREW DRIVERS

EXPLODED VIEW

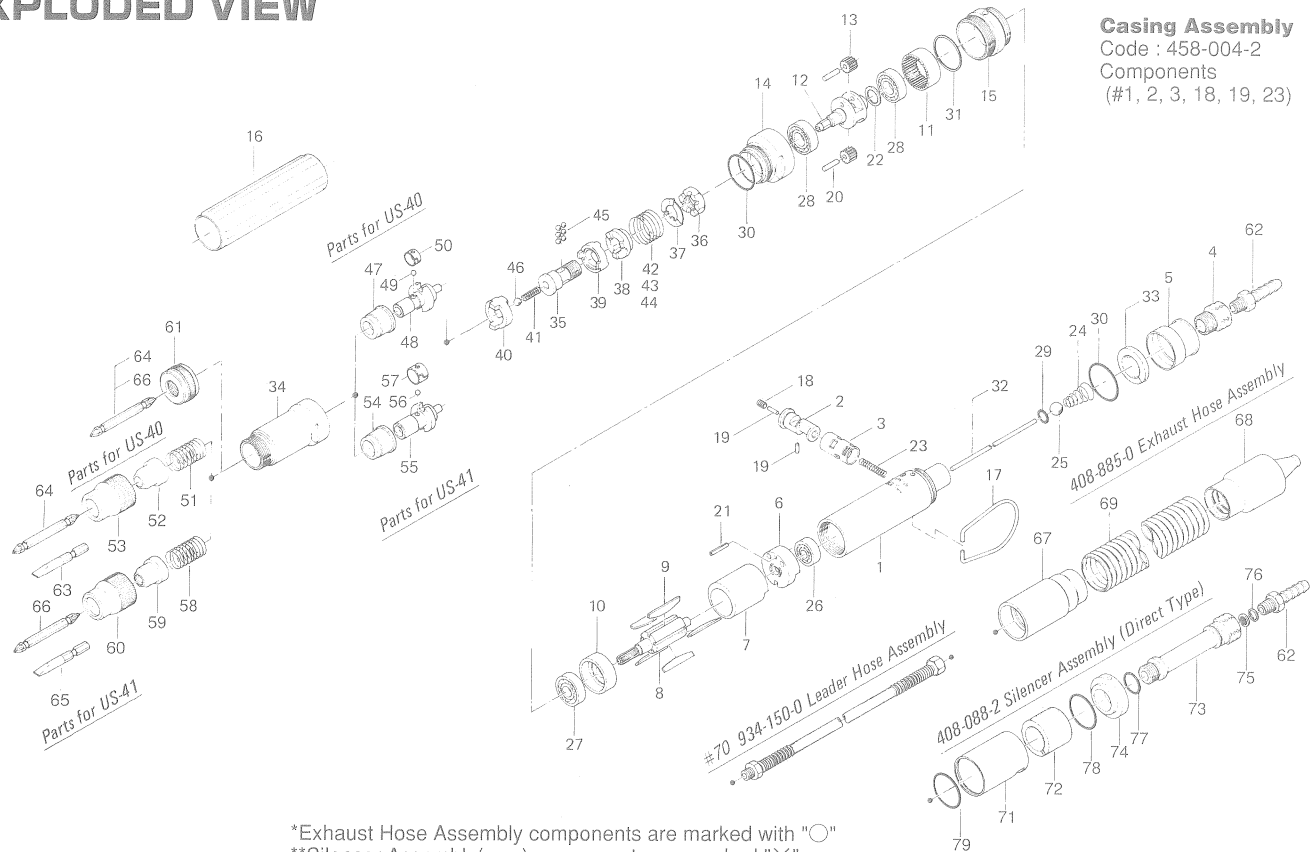

Casing Assembly
Code : 458-004-2
Components
(#1, 2, 3, 18, 19, 23)

PARTS LIST

*Exhaust Hose Assembly components are marked with "○"
**Silencer Assembly(new) components are marked "X"
Parts marked with "*" are at the user's option.

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
Common Parts				#32	487-104-1	Valve Rod	1	Accessories			
# 1	458-025-2	Casing	1	#33	408-835-1	Filter	1	#61	428-057-1	Bit Holder Guide	1
# 2	458-210-1	Reverse Valve	1	#34	487-028-0	Hammer Casing	1	#62	940-113-0	Air Hose Nipple (NPT1/4×1/4)	1
# 3	458-211-1	Reverse Valve Bushing	1	#35	410-360-1	Hammer Shank	1	For US-40			
# 4	408-091-2	Air Inlet Bushing	1	#36	410-362-1	Adjusting Nut	1	#63	916-020-0	(-)Bit (4×51)	1
# 5	458-782-1	Exhaust Deflector	1	#37	418-347-1	Adjusting Nut Lock Washer	1	#64	916-710-0	(+)Double Bit (No.2×70)	1
# 6	458-285-2	Rear Plate	1	#38	410-365-1	Hammer	1	For US-41			
# 7	458-286-1	Cylinder	1	#39	410-364-1	Driven Clutch	1	#65	916-030-0	(-)Bit (5×56)	1
# 8	487-287-0	Rotor	1	#40	410-366-1	Driving Clutch	1	#66	916-810-0	(+)Double Bit (No.2×75)	1
# 9	437-288-1	Blade	5	#41	976-058-0	Spring (4.5×11)	1	For Piped-Away Type Silencer in Common			
#10	437-289-1	Front Plate	1	#42	976-470-0 *	Spring (19.8×14) (1.4) (weak)	1	408-885-0 Exhaust Hose Assembly			
#11	487-465-2	Internal Gear	1	#43	976-485-0 *	Spring (20.2×14) (1.6) (Standard)	1	#67	408-779-0 ○	Exhaust Hose Connector	1
#12	487-480-1	Gear Cage	1	#44	976-486-0 *	Spring (20.6×14) (1.8) (Strong)	1	#68	408-780-0 ○	Exhaust Stack	1
#13	487-470-0	Planet Gear	2	#45	981-002-0	Ball (1/8)	6	#69	935-500-0 ○	Exhaust Hose (16×1800)	1
#14	487-036-2	Hammer Casing Connector	1	#46	981-004-0	Ball (3/16)	1	#70	934-150-0 ○	Leader Hose Assembly	1
#15	487-029-1	Gear Casing	1	For US-40				For Direct Type Silencer in Common			
#16	487-840-1	Casing Protector	1	#47	410-328-1	Anvil Bushing	1	408-088-2 Silencer Assembly (new)			
#17	010-790-1	Suspension Ring	1	#48	410-319-2	Anvil	1	#71	408-778-2 ×	Exhaust Stack Cover (new)	1
#18	952-106-0	Allen Head Dog Point Screw (M4×6)	1	#49	981-002-0	Ball (1/8)	1	#72	408-099-2 ×	Silencer (new)	1
#19	970-092-0	Pin (H) (2×5.5)	2	#50	418-356-1	Bit Band	1	#73	408-098-9 ×	Air Inlet Bushing (new)	1
#20	972-093-0	Roller Pin (3×13)	2	#51	976-358-0	Spring (14.4×26)	1	#74	408-788-1 ×	Exhaust Stack Plate	1
#21	973-016-0	Roll Pin (2×16)	1	#52	917-300-0	Finder (4×51×19)	1	#75	913-477-0 ×	Air Inlet Net	1
#22	975-050-0	Spacer (14×10.4×1)	1	#53	410-057-1	Bit Casing	1	#76	979-001-0 ×	Inner Snap Ring (8)	1
#23	976-041-0	Spring (3.8×21)	1	For US-41				#77	990-011-0 ×	O-Ring (P12)	1
#24	977-128-0	Cone Spring (6.5×11×14)	1	#54	414-328-1	Anvil Bushing	1	#78	990-020-0 ×	O-Ring (P22)	1
#25	981-008-0	Ball (5/16)	1	#55	414-319-1	Anvil	1	#79	990-919-0 ×	O-Ring (SNS-22)	1
#26	982-033-0	Ball Bearing (696)	1	#56	981-002-0	Ball (1/8)	1				
#27	982-015-0	Ball Bearing (608)	1	#57	430-356-1	Bit Band	1				
#28	982-402-0	Ball Bearing (EE-3)	2	#58	976-358-0	Spring (14.4×26)	1				
#29	990-004-0	O-Ring (P6)	1	#59	917-400-0	Finder (5×56×23)	1				
#30	990-919-0	O-Ring (SNS-22)	2	#60	414-057-1	Bit Casing	1				
#31	975-128-0	Spacer (21×16.3×1.5)	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

OKA-206-03-06-06-2003