


US-LT41PB SERIES SCREWDRIVERS

EXPLODED VIEW

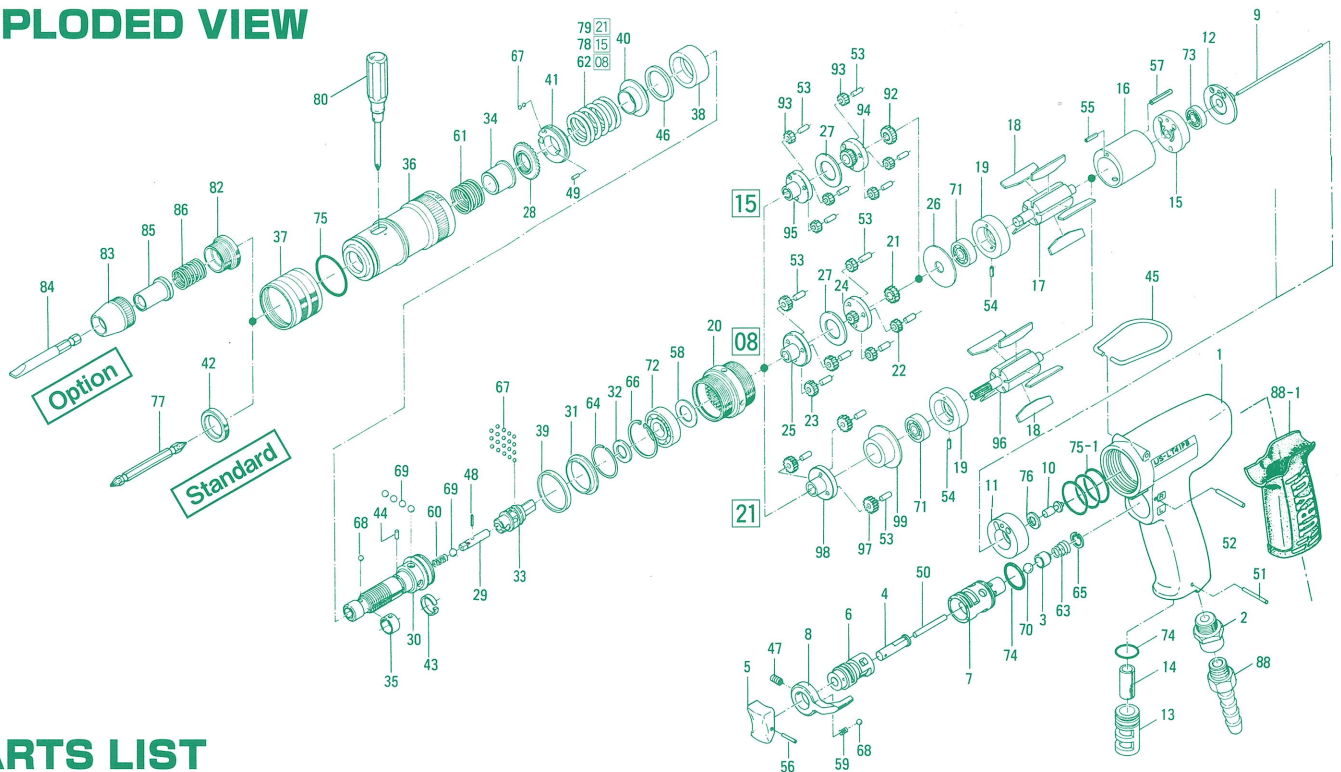

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
#1	443-025-6	Casing	1	#49	970-092-0	Pin (H) (2×5.5)	1		976-516-0	Spring (22.1×28) Weaker	1
#2	480-091-8	Air Inlet Bushing	1	#50	970-228-0	Pin (H)(3×28)	1		976-517-0	Spring (21.5×31) Weakest	1
#3	480-100-9	Valve	1	#51	971-120-0	Pin (2×20)	1	For US-LT41PB-15			
#4	443-103-5	Valve Rod Bushing	1	#52	971-123-0	Pin (2×23)	1	#17	472-287-7	Rotor	1
#5	177-107-5	Valve Lever	1	#54	973-006-0	Roll Pin (2×6)	1	#92	472-460-5	Rotor Gear	1
#6	480-210-9	Reverse Valve	1	#55	973-010-0	Roll Pin (2×10)	1	#93	472-470-5	First Planet Gear	6
#7	480-211-9	Reverse Valve Bushing	1	#56	973-012-0	Roll Pin (2×12)	1	#94	472-480-5	First Gear Cage	1
#8	09B-212-5	Reverse Lever	1	#57	973-018-0	Roll Pin (3×18)	1	#95	472-485-5	Second Gear Cage	1
#9	443-104-5	Valve Rod	1	#58	975-106-0	Spacer (18.5×11×1)	1	#26	472-807-7	Spacer	1
#10	443-254-5	Shut-Off Valve	1	#59	976-006-0	Spring (3×5) (0.4)	1	#27	496-483-1	Gear Cage Spacer	1
#11	443-282-6	Handle Bushing	1	#60	976-058-0	Spring (4.5×11) (0.4)	1	#53	972-089-0	Roller Pin (3×8)	6
#12	443-291-5	Rear Plate Spacer	1	#61	976-450-0	Spring (18.5×10) (1.0)	1	#78	976-516-0	Spring (22.1×28) Standard	1
#13	480-780-8	Exhaust Stack	1	#63	977-150-0	Cone Spring (6.8×8.5×8)	1		976-515-0	Spring (22.7×28) Strong	1
#14	177-835-6	Filter	1	#64	978-218-0	Snap Ring (22×1)	1		976-517-0	Spring (21.5×31) Weaker	1
#15	467-285-7	Rear Plate	1	#65	979-002-0	Inner Snap Ring (9)	1	For US-LT41PB-21			
#16	443-286-5	Cylinder	1	#66	979-326-0	Inner Snap Ring (IRTW-26)	1	#96	472-287-3	Rotor	1
#18	425-288-4	Blade	5	#67	981-001-0	Ball (3/32)	21	#97	472-470-3	Planet Gear	3
#19	472-289-7	Front Plate	1	#68	981-002-0	Ball (1/8)	2	#98	472-480-3	Gear Cage	1
#20	463-029-8	Gear Casing	1	#69	981-004-0	Ball (3/16)	5	#99	472-807-3	Spacer	1
#28	472-257-8	Regulating Screw	1	#70	981-206-0	Ball (1/4)	1	#53	972-089-0	Roller Pin (3×8)	3
#29	471-318-5	Pilot Pin	1	#71	982-063-0	Ball Bearing (606ZZ)	1	#79	976-517-0	Spring (21.5×31) Standard	1
#30	472-319-7	Anvil	1	#72	982-100-0	Ball Bearing (6000)	1		976-516-0	Spring (22.1×28) Strong	1
#31	463-334-7	Anvil Spacer	1	#73	987-039-0	Mini. Ball Bearing (R1560ZZ)	1	Accessories			
#32	461-344-6	Cam Retainer	1	#74	990-912-0	O-Ring (SNS-14)	2	#77	916-810-0	Double Bit No.2×75	1
#33	472-346-5	Cam	1	#75	990-923-0	O-Ring (SNS-26)	1	#80	939-402-0	Manual Driver (No.2)	1
#34	472-351-7	Bit Sleeve	1	#75-1	990-333-0	O-Ring (JW1530-23)	3	#88	940-113-0	Air Hose Nipple	1
#35	471-356-7	Bit Band	1	#76	996-411-0	Packing (11×6×1)	1	Optional Accessories			
#36	463-369-7	Clutch Casing	1	#88-1	442-842-4	Handle Cover	1	For Slotted Head Bit and Finder (In common)			
#37	472-370-7	Clutch Casing Sleeve	1	For US-LT41PB-08				[Take out #42, #77 and use following]			
#38	472-375-7	Cam Ring	1	#17	472-287-7	Rotor	1	#82	472-082-7	Bit Casing Set Screw	1
#39	463-397-7	Nut Flange	1	#21	472-460-7	Rotor Gear	1	#83	471-057-7	Bit Casing	1
#40	472-379-8	Retainer	1	#22	472-470-7	First Planet Gear	3	#84	916-030-0	(-)Bit (5×56) (6.35H)	1
#41	472-562-8	Stopper	1	#23	472-471-7	Second Planet Gear	3	#85	917-350-0	Finder (73×56×24)	1
#42	472-567-7	Bushing	1	#24	472-480-7	First Gear Cage	1	#86	976-330-0	Spring (13.8×18) (0.8)	1
#43	471-670-7	Band	1	#25	472-485-7	Second Gear Cage	1				
#44	471-764-7	Notch Pin	1	#26	472-807-7	Spacer	1				
#45	010-790-1	Suspension Ring	1	#27	496-483-1	Gear Cage Spacer	1				
#46	944-019-0	Support Ring (P19)	1	#53	972-089-0	Roller Pin (3×8)	6				
#47	952-106-0	Allen H. D. P. Screw (M4×6)	1	#62	976-515-0	Spring (22.7×28) Standard	1				
#48	969-470-0	Pin (E) (2×8)	1								

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-245-23-05-30-1011