

US-LT50B SERIES SCREWDRIVERS

EXPLODED VIEW

For US-LT50B-05

#60 Standard

#61 Weaker

#62 Weakest

For US-LT50B-08

#60 Strong


#61 Standard

#62 Weaker

For US-LT50B-17

#61 Strong

#62 Standard

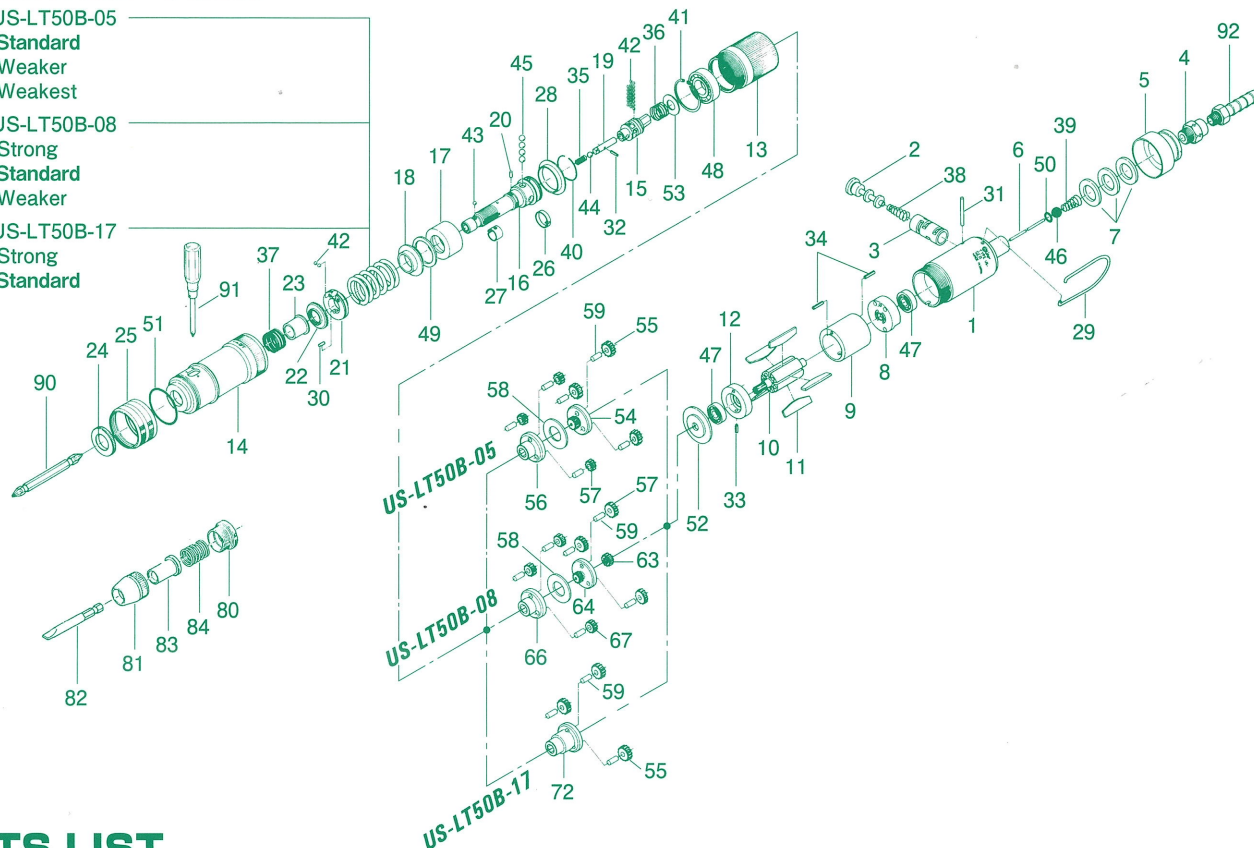

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
US-LT50 series Common parts				#32	969-470-0	Pin (2×8)	1	Parts for US-LT50B-08			
# 1	444-025-4	Casing	1	#33	973-007-0	Roll Pin (2×7)	1	#57	444-471-4	First Planer Gear	3
# 2	893-058-1	Reverse Valve	1	#34	973-072-0	Roll Pin (2.5×12)	2	#58	444-483-4	Gear Cage Spacer	1
# 3	444-211-4	Reverse Valve Bushing	1	#35	976-058-0	Spring (4.5×11)	1	#59	972-110-0	Needle Roller (4×10)	6
# 4	480-091-8	Air Inlet Bushing	1	#36	976-332-0	Spring (13.5×10)	1	#61	976-614-0	Spring (27×38)	1
# 5	444-782-4	Exhaust Deflector	1	#37	976-450-0	Spring (18.5×10)	1	#63	444-460-3	Rotor Gear	1
# 6	444-104-4	Valve Rod	1	#38	977-103-0	Cone Spring (6×9.5×16)	1	#64	444-480-3	First Gear Cage	1
# 7	161-835-4	Filter(K-50)	3	#39	977-157-0	Cone Spring (7×11×20)	1	#66	444-485-3	Second Gear Case	1
# 8	444-285-4	Rear Plate	1	#40	978-229-0	Snap Ring (23×1)	1	#67	444-471-3	Second Planet Gear	option
# 9	444-286-4	Cylinder	1	#41	979-025-0	Inner Snap Ring (32)	1	#60	976-620-0	Spring (27.5×38)	1
#10	444-287-4	Rotor	1	#42	981-001-0	Ball (3/32)	24	#62	976-588-0	Spring (25×38)	1
#11	444-288-4	Blade	5	#43	981-002-0	Ball (1/8)	1	Parts for US-LT50B-17			
#12	444-289-4	Front Plate	1	#44	981-004-0	Ball (3/16)	1	#55	444-470-4	First Planet Gear	3
#13	444-029-4	Gear Casing	1	#45	981-005-0	Ball (7/32)	4	#59	972-110-0	Needle Roller (4×10)	3
#14	444-369-4	Clutch Casing	1	#46	981-208-0	Ball (5/16)	1	#62	976-588-0	Spring (25×38)	1
#15	444-346-3	Cam	1	#47	982-066-0	Ball Bearing (607ZZ)	2	#72	444-480-2	Gear Cage	1
#16	444-319-4	Anvil	1	#48	982-102-0	Ball Bearing (6002)	1	option			
#17	444-375-3	Cam Ring	1	#49	944-023-0	Supporting Ring(P-22A)	1	#61	976-614-0	Spring (27×38)	1
#18	444-379-3	Retainer	1	#50	990-005-0	O Ring (P-7)	1	For Slotted Head Bit and Finder			
#19	471-318-5	Pilot Pin	1	#51	990-935-0	O Ring (SNS-31.5)	1	(Remove #24 444-567-4 Bushing)			
#20	444-764-4	Notch Pin	1	#52	444-807-4	Spacer	1	#80	444-082-4	Bit Casing Set Screw	1
#21	444-562-4	Spring Holder	1	#53	975-109-0	Spacer (20×9.5×1.5)	1	#81	471-057-7	Bit Casing	1
#22	472-257-8	Regulating Screw	1	Parts for US-LT50B-05				#82	916-030-0	(-) Bit (5×56)	1
#23	472-351-7	Bit Sleeve	1	#54	444-480-4	First Gear Cage	1	#83	917-350-0	Finder (7.3×56×24)	1
#24	444-567-4	Bushing	1	#55	444-470-4	First Planer Gear	3	#84	976-330-0	Spring (13.8×18×0.8)	1
#25	444-370-4	Clutch Casing Sleeve	1	#56	444-485-4	Second Gear Cage	1	Accessories			
#26	444-670-4	Band	1	#57	444-471-4	Second Planet Gear	3	#90	916-810-0	(+)Double Bit(No.2×75)	1
#27	471-356-7	Bit Band	1	#58	444-483-4	Gear Cage Spacer	1	#91	939-402-0	Manual Driver (No.2)	1
#28	444-334-8	Anvil Spacer	1	#59	972-110-0	Needle Roller (4×10)	6	#92	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#29	191-790-1	Suspension Ring	1	#60	976-620-0	Spring (27.5×38)	1				
#30	970-092-0	Pin (H)(2×5.5)	1	option							
#31	970-226-0	Pin (H)(3×26)	1	#61	976-614-0	Spring (27×38)	1				
				#62	976-588-0	Spring (25×38)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-253-23-06-27-1015