


US-LT51PB SERIES SCREWDRIVERS

EXPLODED VIEW

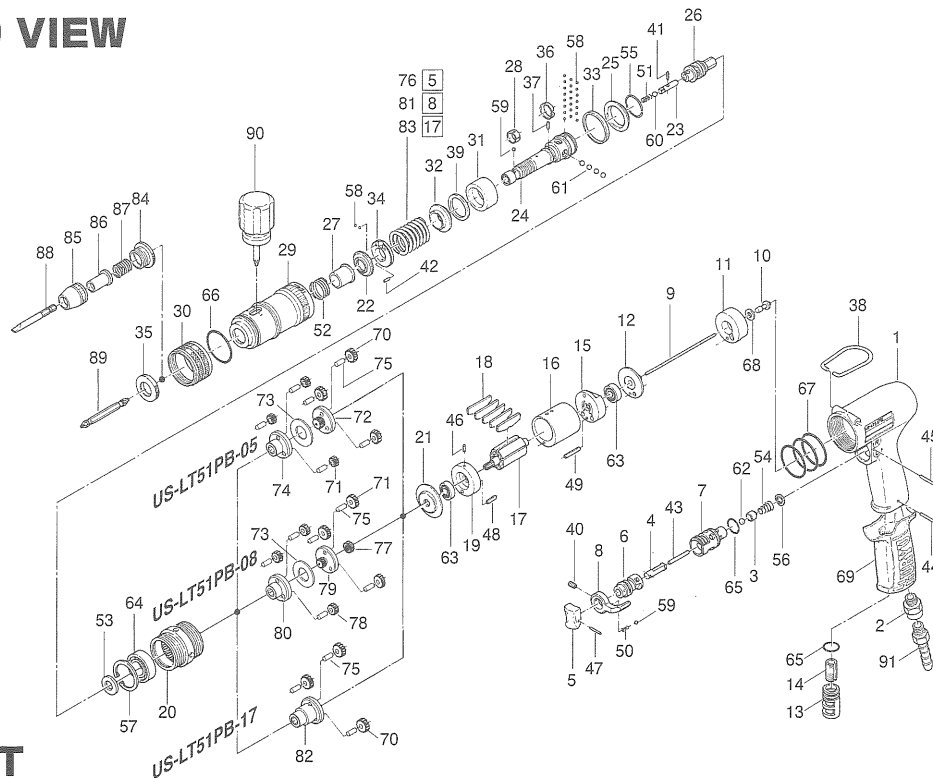

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
US-LT51PB series Common parts				#38	010-790-1	Suspension Ring	1	#76	976-620-0	Spring (27.5×38)(3.5)(Black) Standard	1
#01	445-025-9	Handle	1	#39	944-023-0	Back-Up Ring (P22A)	1		976-614-0	Spring (27.0×38)(3.0)(Red) Weaker	1
#02	480-091-8	Air Inlet Bushing	1	#40	952-106-0	Allen Head Screw (M4×6)	1		976-588-0	Spring (25.0×38)(2.3)(Yellow) Weakest	1
#03	480-100-9	Valve	1	#41	969-470-0	Pin (E)(2×8)	1	Parts for US-LT51PB-08			
#04	443-103-5	Valve Rod Bushing	1	#42	970-092-0	Pin (H)(2×5.5)	1	#71	444-471-4	First Planet Gear	3
#05	177-107-5	Valve Lever	1	#43	970-228-0	Pin (H)(3×28)	1	#73	444-483-4	Gear Cage Spacer	1
#06	480-210-9	Reverse Valve	1	#44	971-120-0	Pin (2×20)	1	#75	972-110-0	Needle Roller (4×10)	6
#07	480-211-9	Reverse Valve Bushing	1	#45	971-123-0	Pin (2×23)	1	#77	444-460-3	Rotor Gear	1
#08	09B-212-5	Reverse Lever	1	#46	973-007-0	Roll Pin (2×7)	1	#78	444-471-3	Second Planet Gear	3
#09	445-104-8	Valve Rod	1	#47	973-012-0	Roll Pin (2×12)	1	#79	444-480-3	First Gear Cage	1
#10	443-254-5	Shut-Off Valve	1	#48	973-072-0	Roll Pin (2.5×12)	1	#80	444-485-3	Second Gear Cage	1
#11	445-282-9	Handle Bushing	1	#49	973-080-0	Roll Pin (2.5×20)	1	#81	976-614-0	Spring (27.0×38)(3.0)(Red) Standard	1
#12	445-291-8	Rear Plate Spacer	1	#50	976-006-0	Spring (3×5×0.4)	1		976-620-0	Spring (27.5×38)(3.5)(Black) Strong	1
#13	480-780-8	Exhaust Stack	1	#51	976-058-0	Spring (4.5×11×0.4)	1		976-588-0	Spring (25.0×38)(2.3)(Yellow) Weaker	1
#14	480-835-8	Filter	1	#52	976-450-0	Spring (18.5×10×1.0)	1	Parts for US-LT51PB-17			
#15	444-285-4	Rear Plate	1	#53	975-109-0	Spacer (20×9.5×1.5)	1	#70	444-470-4	First Planet Gear	3
#16	445-286-8	Cylinder	1	#54	977-150-0	Cone Sprig (6.8×85×8×0.4)	1	#75	972-110-0	Needle Roller (4×10)	3
#17	444-287-4	Rotor	1	#55	978-229-0	Snap Ring (23×1)	1	#82	444-480-2	Gear Cage	1
#18	444-288-6	Blade (PC)	5	#56	979-002-0	Inner Snap Ring (9)	1	#83	976-588-0	Spring (25.0×38)(2.3)(Yellow) Standard	1
#19	444-289-4	Front Plate	1	#57	979-025-0	Inner Snap Ring (32)	1		976-614-0	Spring (27.0×38)(3.0)(Red) Strong	1
#20	444-029-9	Gear Casing	1	#58	981-001-0	Ball (3/32)	24	For Slotted Head Bit and Finder			
#21	444-807-4	Spacer (A)	1	#59	981-002-0	Ball (1/8)	2	(Remove #36 Bushing)			
#22	472-257-8	Adjusting Screw	1	#60	981-004-0	Ball (3/16)	1	#84	444-082-4	Bit Casing Set Screw	1
#23	471-318-5	Pilot Pin	1	#61	981-005-0	Ball (7/32)	4	#85	471-057-7	Bit Casing	1
#24	444-319-4	Anvil	1	#62	981-206-0	Ball (1/4)(Black)	1	#86	917-350-0	Finder (7.3×56×24)	1
#25	444-334-8	Anvil Spacer	1	#63	982-066-0	Ball Bearing (607ZZ)	2	#87	976-330-0	Spring (13.8×18×0.8)	1
#26	444-346-3	Cam	1	#64	982-102-0	Ball Bearing (6002)	1	#88	916-030-0	(-) Bit (5×56)	1
#27	472-351-7	Bit Sleeve	1	#65	990-912-0	O-Ring (SNS-14)	2	ACCESSORIES			
#28	471-356-7	Bit Band	1	#66	990-935-0	O-Ring (SNS-31.5)	1	#89	916-810-0	(+) Double Bit (No.2×75)	1
#29	444-369-8	Clutch Casing	1	#67	990-925-0	O-Ring (SNS-32)	3	#90	939-402-0	Manual Driver (No. 2)	1
#30	444-370-4	Clutch Casing Sleeve	1	#68	996-411-0	Packing (11×6×1)	1	#91	940-114-0	Air Hose Nipple	1
#31	444-375-3	Cam Ring	1	#69	442-842-4	Handle Cover	1				
#32	444-379-3	Retainer	1	Parts for US-LT51PB-05							
#33	444-397-8	Spacer (B)	1	#70	444-470-4	First Planet Gear	3				
#34	444-562-4	Spring Holder	1	#71	444-471-4	Second Planet Gear	3				
#35	444-567-4	Bushing	1	#72	444-480-4	First Gear Cage	1				
#36	444-670-4	Band	1	#73	444-483-4	Gear Cage Spacer	1				
#37	444-764-4	Notch Pin	1	#74	444-485-4	Second Gear Cage	1				
				#75	972-110-0	Needle Roller (4×10)	6				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-437-17-09-21-1006