US-LT30A, B, AL&BL SERIES SCREW DRIVERS

EXPLODED VIEW

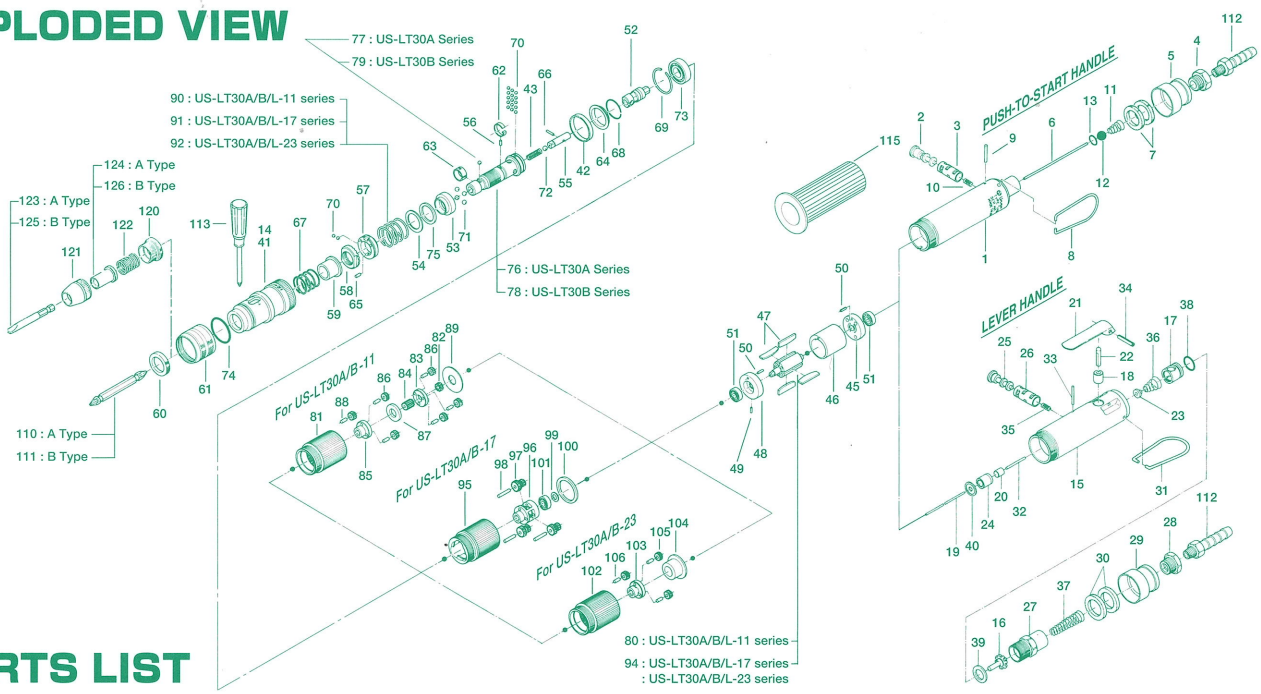

PARTS LIST

Index No.	Code No.	Parts Name	Quantity
US-LT30 series PUSH-TO-START HANDLE			
# 1	471-025-8	Casing	1
# 2	893-056-1	Reverse Valve (Locking)	1
# 3	471-211-7	Reverse Valve Bushing	1
# 4	480-091-8	Air Inlet Bushing	1
# 5	408-782-1	Exhaust Deflector	1
# 6	471-104-7	Valve Rod	1
# 7	471-835-5	Filter (K100)	2
# 8	401-790-1	Suspension Ring	1
# 9	972-020-0	Roller Pin (2×19.8)	1
#10	976-058-0	Spring (4.5×11)	1
#11	977-157-0	Cone Spring (7×11×20)	1
#12	981-208-0	Ball (5/16)	1
#13	990-004-0	O Ring (P-6)	1
#14	471-369-7	Clutch Casing	1
US-LT30L series LEVER HANDLE			
#15	469-025-5	Casing	1
#16	259-100-0	Valve	1
#17	461-102-6	Valve Bushing	1
#18	553-103-1	Valve Rod Bushing	1
#19	462-104-7	Valve Rod	1
#20	444-106-8	Valve Rod Cap	1
#21	466-107-5	Valve Lever	1
#22	469-114-5	Valve Pin	1
#23	259-254-0	Shut-Off Valve	1
#24	461-567-6	Bushing	1
#25	893-056-1	Reverse Valve (Locking)	1
#26	471-211-7	Reverse Valve Bushing	1
#27	461-097-6	Air Inlet Connector	1
#28	480-091-8	Air Inlet Bushing	1
#29	408-782-1	Exhaust Deflector	1
#30	471-835-5	Filter (K100)	2
#31	401-790-1	Suspension Ring	1
#32	970-105-0	Pin (H)(2×24)	1
#33	972-020-0	Roller Pin (2×19.8)	1
#34	973-118-0	Roll Pin (3×18)	1
#35	976-058-0	Spring (4.5×11)	1
#36	977-071-0	Cone Spring (5.5×11.5×15)	1
#37	977-155-0	Cone Spring (7×10×35)	1
#38	990-911-0	O Ring (SNS-12)	1
#39	996-424-0	Packing	1
#40	469-291-5	Rear Plate Spacer	1
#41	462-369-7	Clutch Casing	1
#42	462-397-7	Gear Casing Flange	1
Common Parts			
#43	976-058-0	Spring (4.5×11)	1
#45	471-285-7	Rear Plate	1
#46	471-286-7	Cylinder	1
#47	471-288-1	Blade	4
#48	471-289-7	Front Plate	1
#49	973-001-0	Roll Pin (1.5×6)	1
#50	973-003-0	Roll Pin (1.5×8)	2
#51	987-041-0	Mini. Ball Bearing (R1350ZZ)	2
#52	471-346-5	Cam	1
#53	471-375-8	Cam Ring	1
#54	471-164-8	Spring Setter	1
#55	471-318-5	Pilot Pin	1
#56	471-764-7	Notch Pin	1
#57	471-562-7	Retainer	1
#58	471-257-7	Regulating Screw	1
#59	471-351-6	Bit Sleeve	1
#60	471-567-6	Bushing	1
#61	471-370-7	Clutch Casing Sleeve	1
#62	471-670-7	Band	1
#63	471-356-7	Bit Band	1
#64	462-334-7	Anvil Spacer	1
#65	970-091-0	Pin (H)(2×4.5)	1
#66	969-470-0	Pin (2×8)	1
#67	976-450-0	Spring (18.5×10)	1
#68	978-185-0	Snap Ring (19×1)	1
#69	978-229-0	Snap Ring (23×1)	1
#70	981-001-0	Ball (3/32)	17
#71	981-003-0	Ball (5/32)	4
#72	981-004-0	Ball (3/16)	1
#73	982-901-0	Ball Bearing (6900)	1
#74	990-919-0	O Ring (SNS-22)	1
#75	944-016-0	Back-up Ring (P-16)	1
Parts for US-LT30A series			
#76	471-319-5	Anvil	1
#77	981-003-0	Ball (5/32)	1
Parts for US-LT30B series			
#78	471-319-2	Anvil	1
#79	981-002-0	Ball (1/8)	1
Parts for US-LT30A/B-11 series			
#80	471-287-7	Rotor	1
#81	471-029-7	Gear Casing	1
#82	471-460-7	Rotor Gear	1
#83	471-480-7	First Gear Cage	1
#84	471-445-7	Middle Gear	1
#85	471-485-7	Second Gear Cage	1
#86	471-471-7	Planet Gear	6
#87	471-483-7	Gear Cage Spacer	1
#88	972-033-0	Roller Pin (2.5×8)	6
#89	975-178-0	Spacer (26×10×1.5)	1
#90	976-472-0	Spring (20.6×22) Standard	1
#91	976-493-0	Spring (20.8×22) Weak	1
#92	976-471-0	Spring (19.4×22) Weaker	1
#93	976-504-0	Spring (21×22) Strong	1
Parts for US-LT30A/B-17 series			
#90	976-472-0	Spring (20.6×22) Strong	1
#91	976-493-0	Spring (20.8×22) Standard	1
#92	976-471-0	Spring (19.4×22) Weak	1
#94	471-287-5	Rotor	1
#95	471-029-5	Gear Casing	1
#96	471-480-5	Gear Cage	1
#97	471-470-6	Planet Gear	3
#98	972-036-0	Roller Pin (2.5×15.8)	3
#99	975-009-0	Spacer (9×5.2×0.3)	1
#100	975-188-0	Spacer (26×20×1.5)	1
#101	987-013-0	Mini. Ball Bearing (R1350)	1
Parts for US-LT30A/B-23 series			
#91	976-493-0	Spring (20.8×22) Strong	1
#92	976-471-0	Spring (19.4×22) Standard	1
#94	471-287-5	Rotor	1
#102	471-029-7	Gear Casing	1
#103	471-480-3	Gear Cage	1
#104	471-483-3	Gear Cage Spacer	1
#105	471-470-3	Planet Gear	3
#106	972-033-0	Roller Pin (2.5×8)	3
ACCESSORIES			
#110	916-710-0	Double Bit (No.2×70) for A-type	1
#111	916-810-0	Double Bit (No.2×75) for B-type	1
#112	940-113-0	Air Hose Nipple	1
#113	939-402-0	Manual Driver No. 2	1
#115	471-083-7	Casing Protector	1
For Slotted Head Bit and Finder			
(Remove #21 471-567-6 Bushing and use following)			
#120	471-082-7	Bit Casing Set Screw	1
#121	471-057-7	Bit Casing	1
#122	976-330-0	Spring (13.8×18×0.8)	1
#123	916-020-0	(-) Bit (4×51) for A-type	1
#124	917-299-0	Finder for A-type	1
#125	916-030-0	(-) Bit (5×56) for B-type	1
#126	917-350-0	Finder for B-type	1

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan

PRINTED WITH SOY INK

URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-248-24-02-08-1010